




JULI VANSYSTEM

ASSEMBLY INSTRUCTIONS · FURNITURE MODULE

LONGITUDINAL BED 200 – 3 DRAWERS (RIGHT)

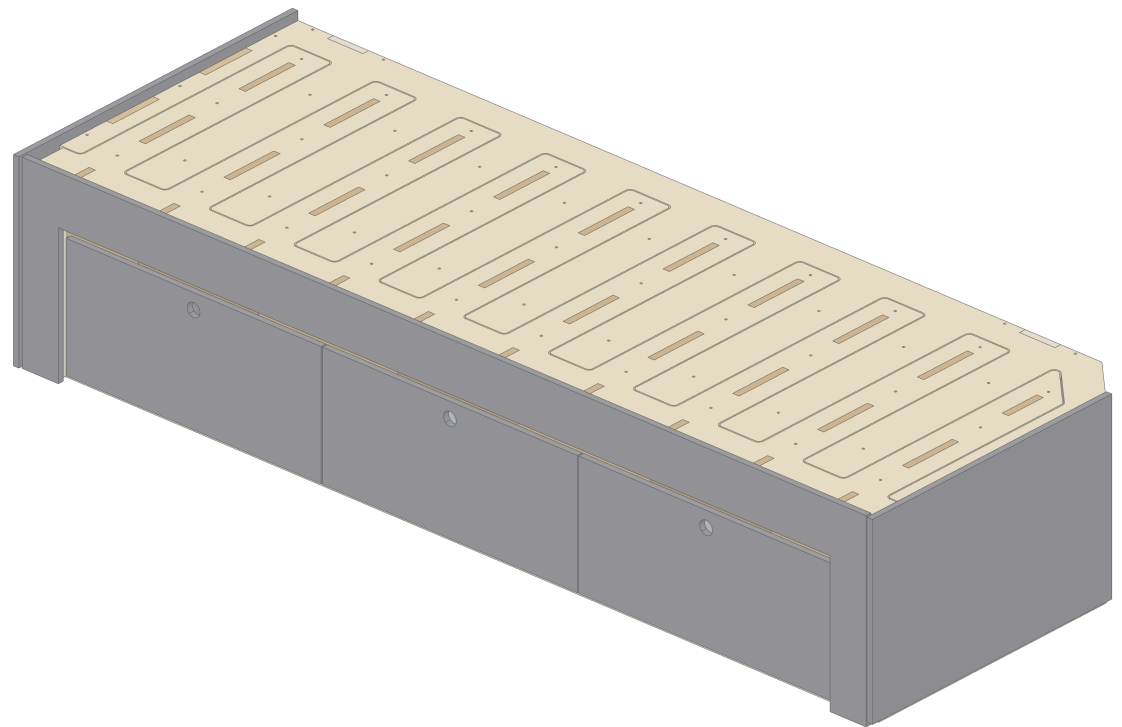

200

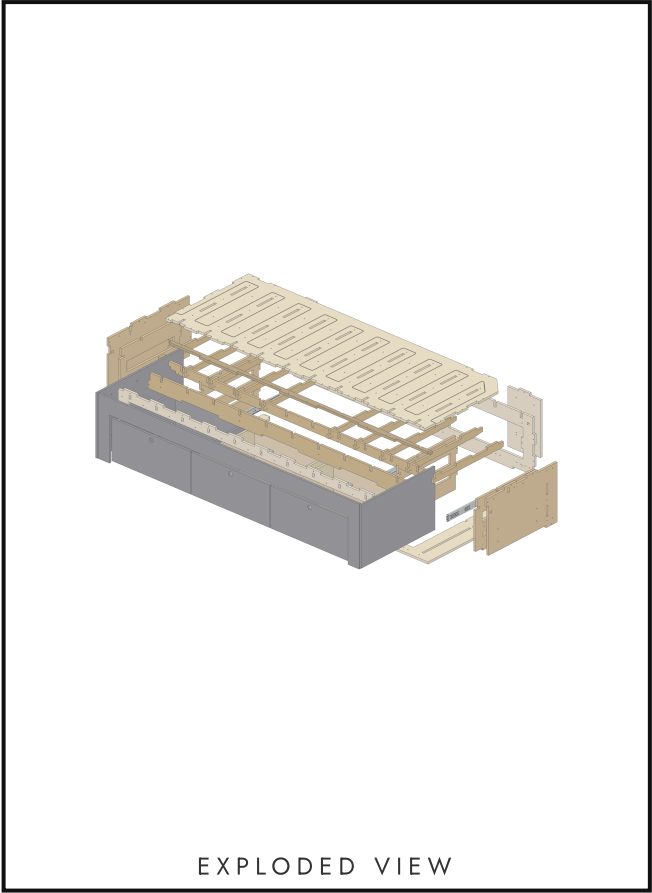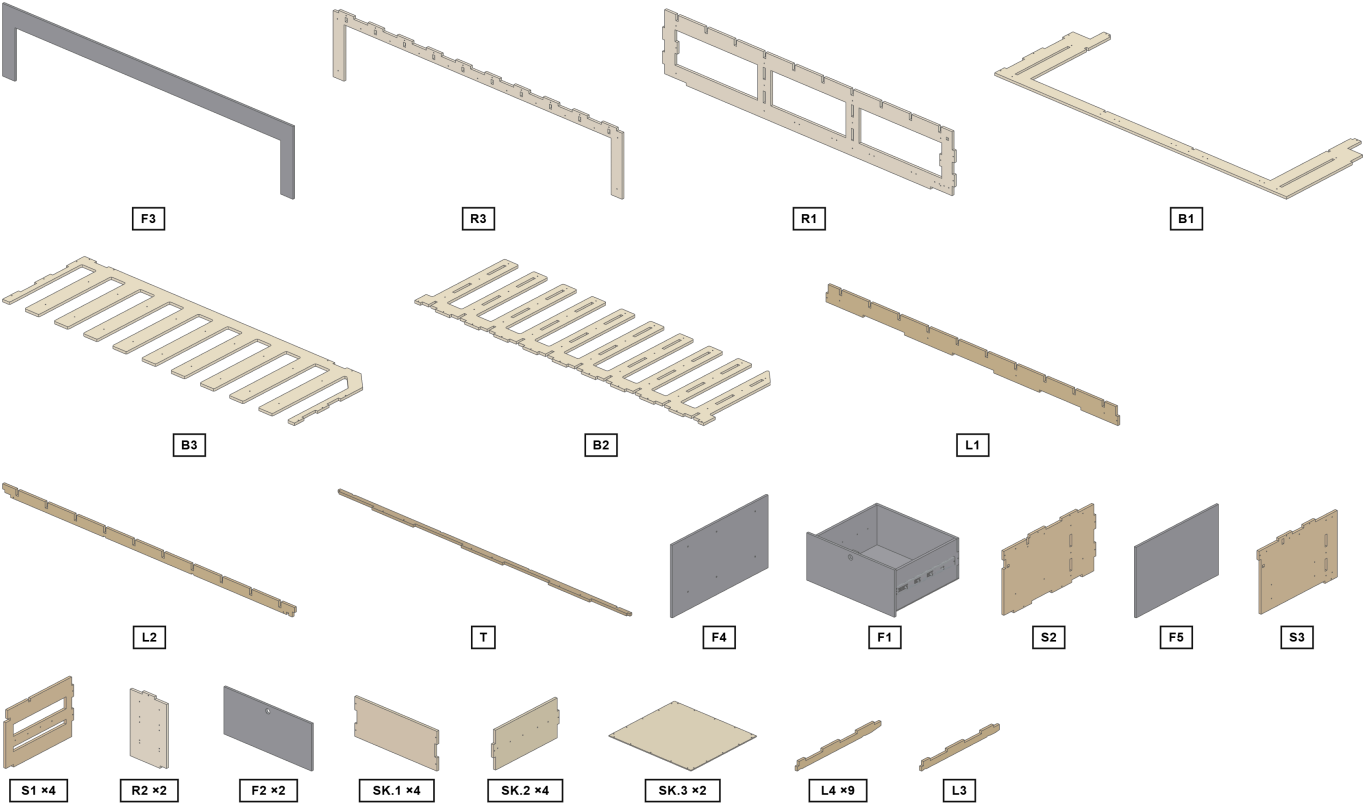

EXPLODED VIEW

54

PARTS TOTAL

26


BODY PARTS

14


FRONTS / DRAWERS

3


EVERLOCK CONNECTORS

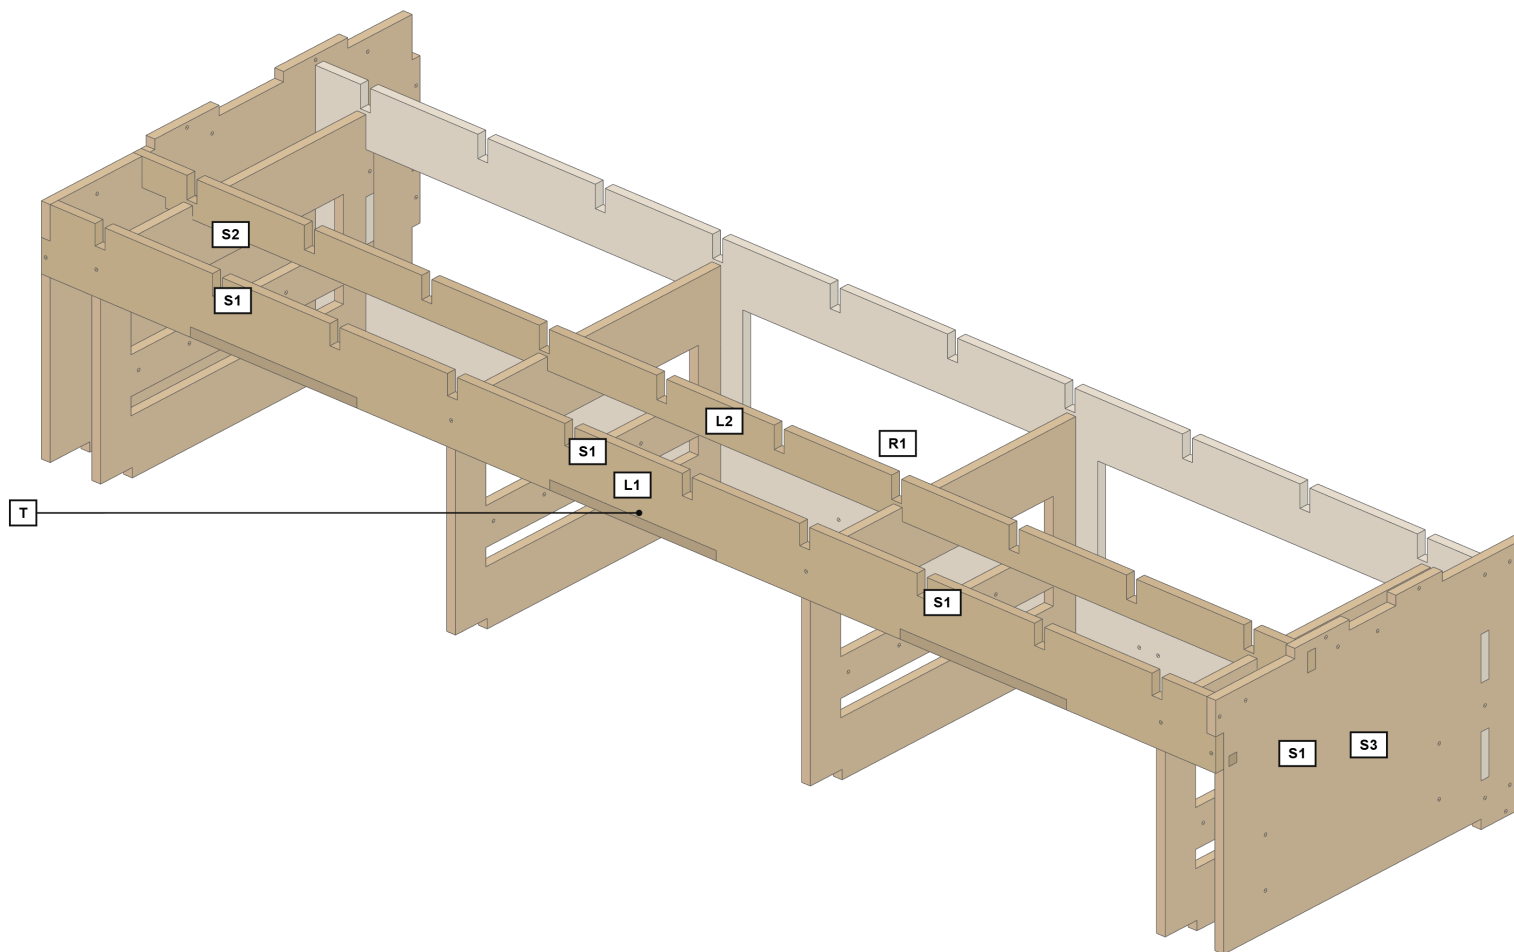


Screw the side and cross walls together with the longitudinal strips and cross rails (S1, S3, S2, R1, L1, L2, T). All joints are pre-drilled – the codes are marked on the parts; check for square alignment.

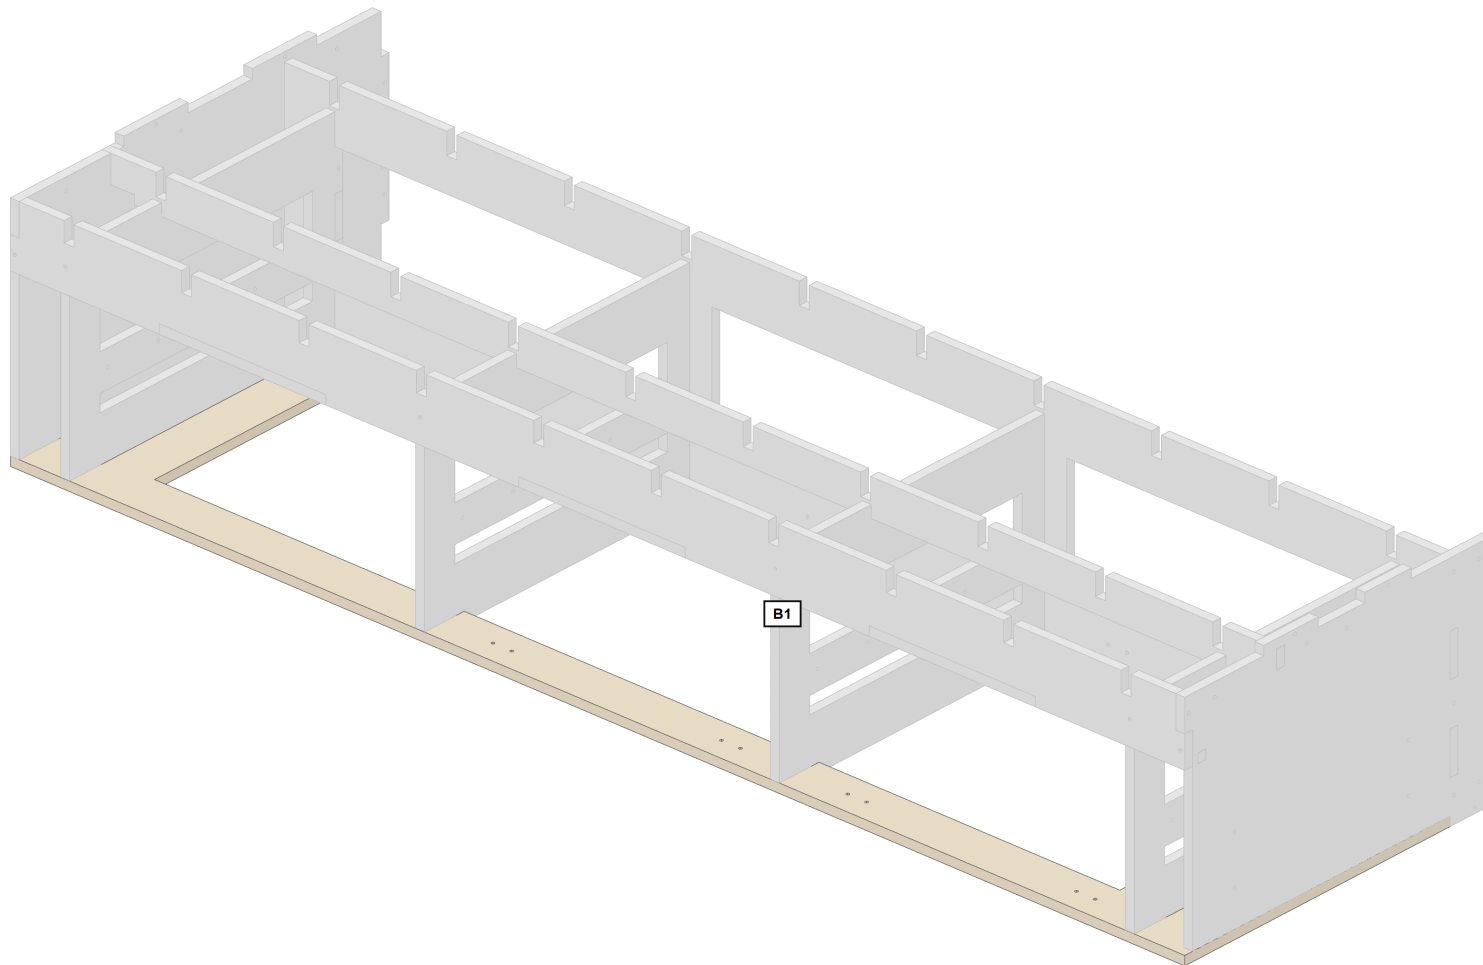


Insert the base panel (B1) and screw it into the walls from below. It braces the body and forms the floor of the drawer compartments.

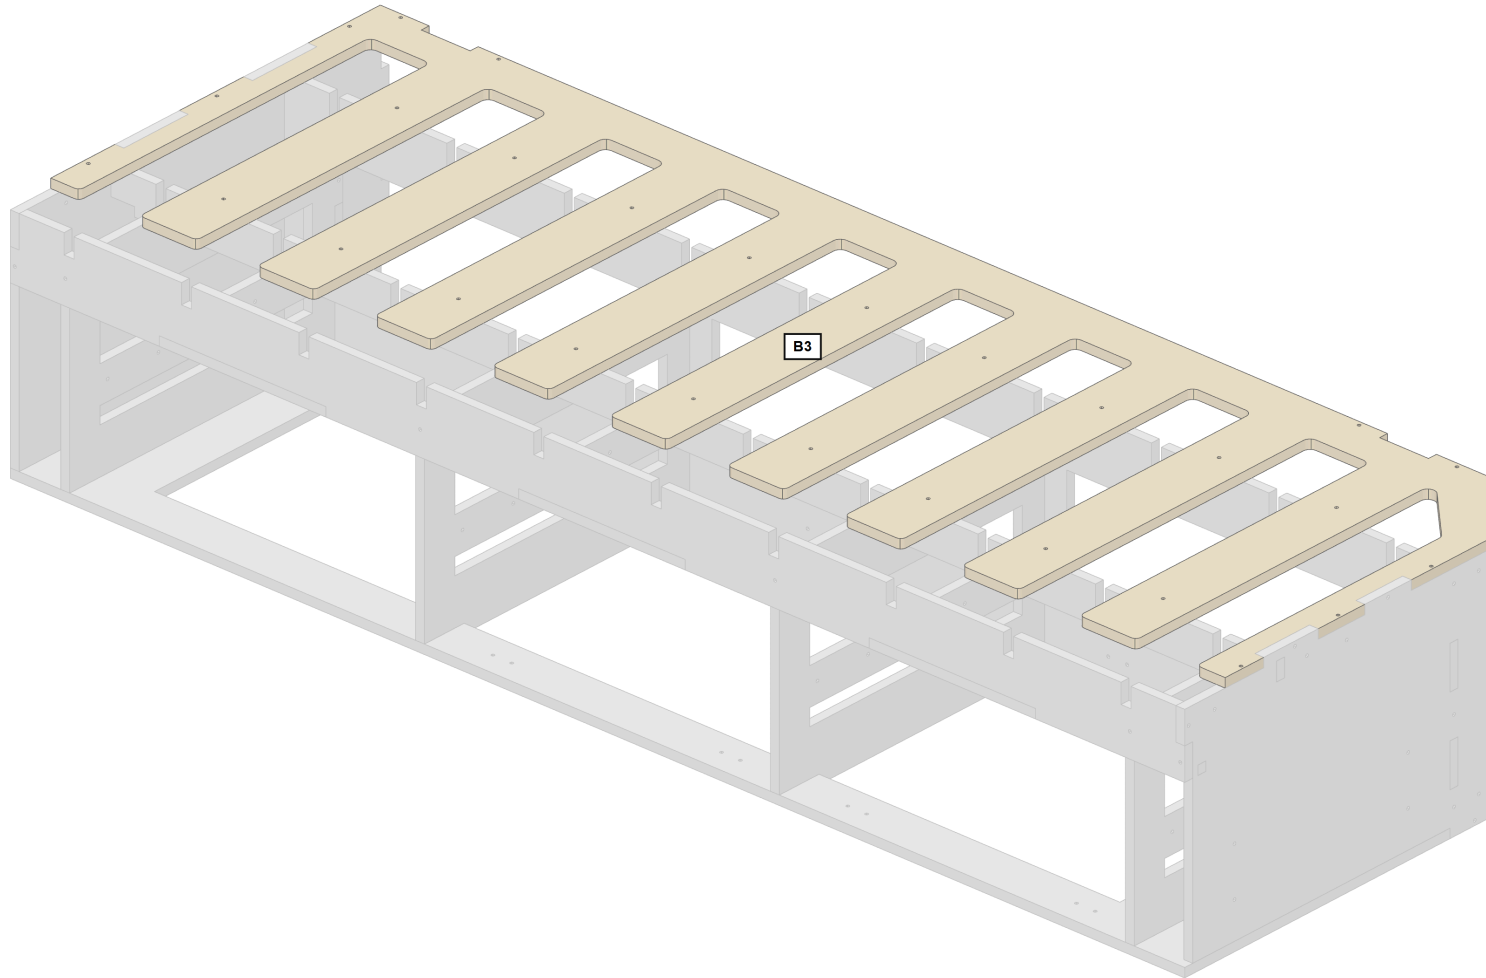


Place the fixed bed base panel (B3) onto the strips and screw it down. It rests on the longitudinal strips – only tighten once it sits cleanly on all supports.

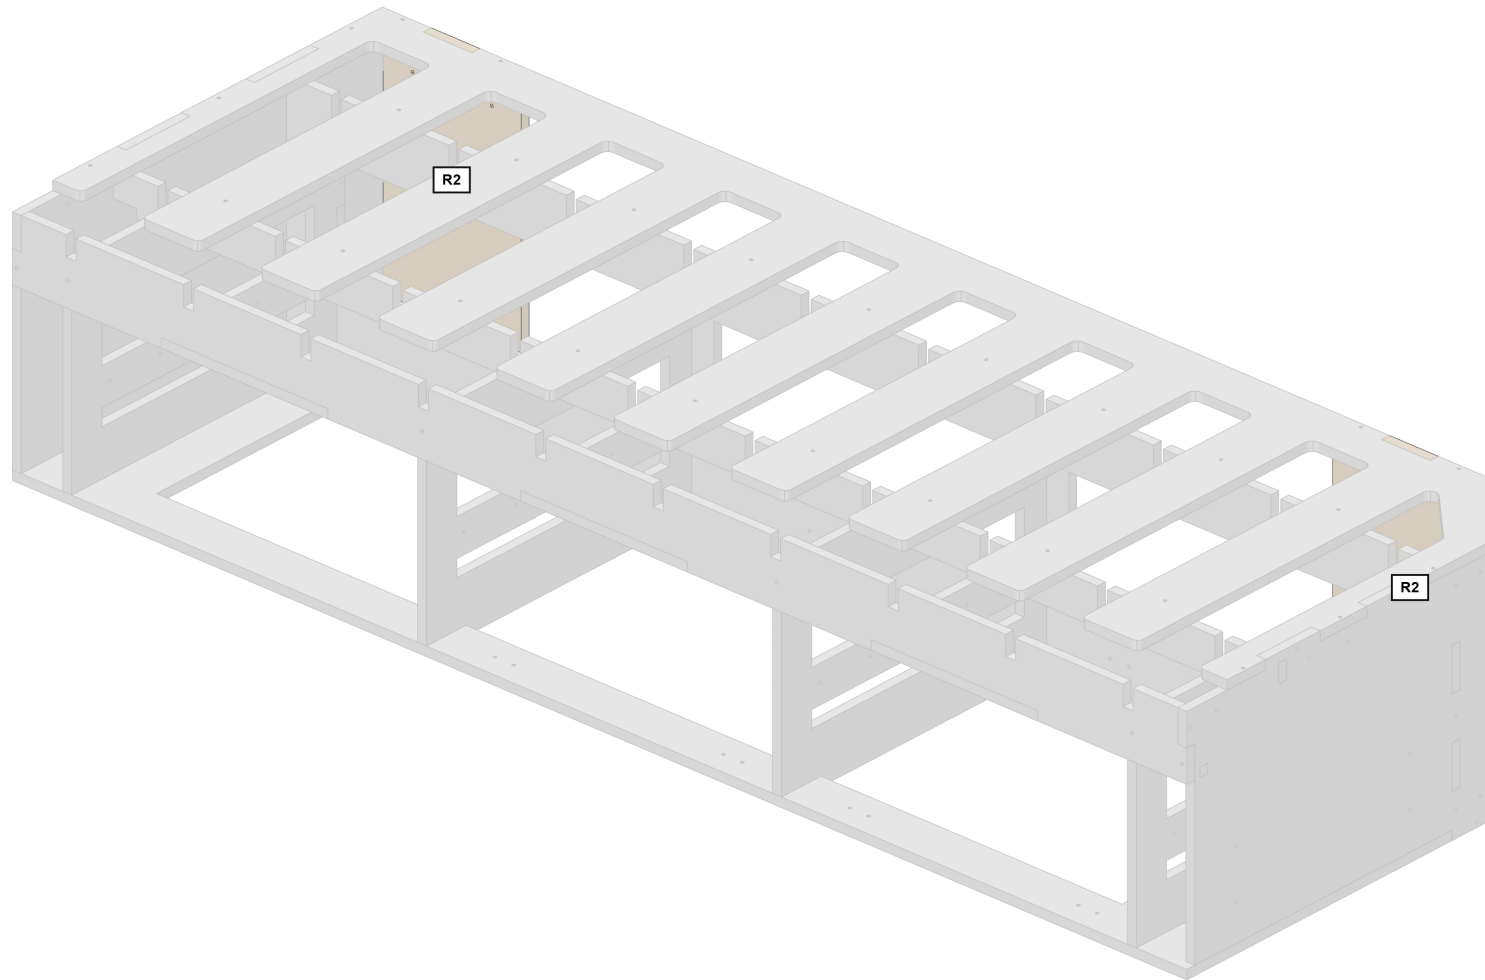


Screw the short side parts (R2) to the outer faces. The body is now closed.

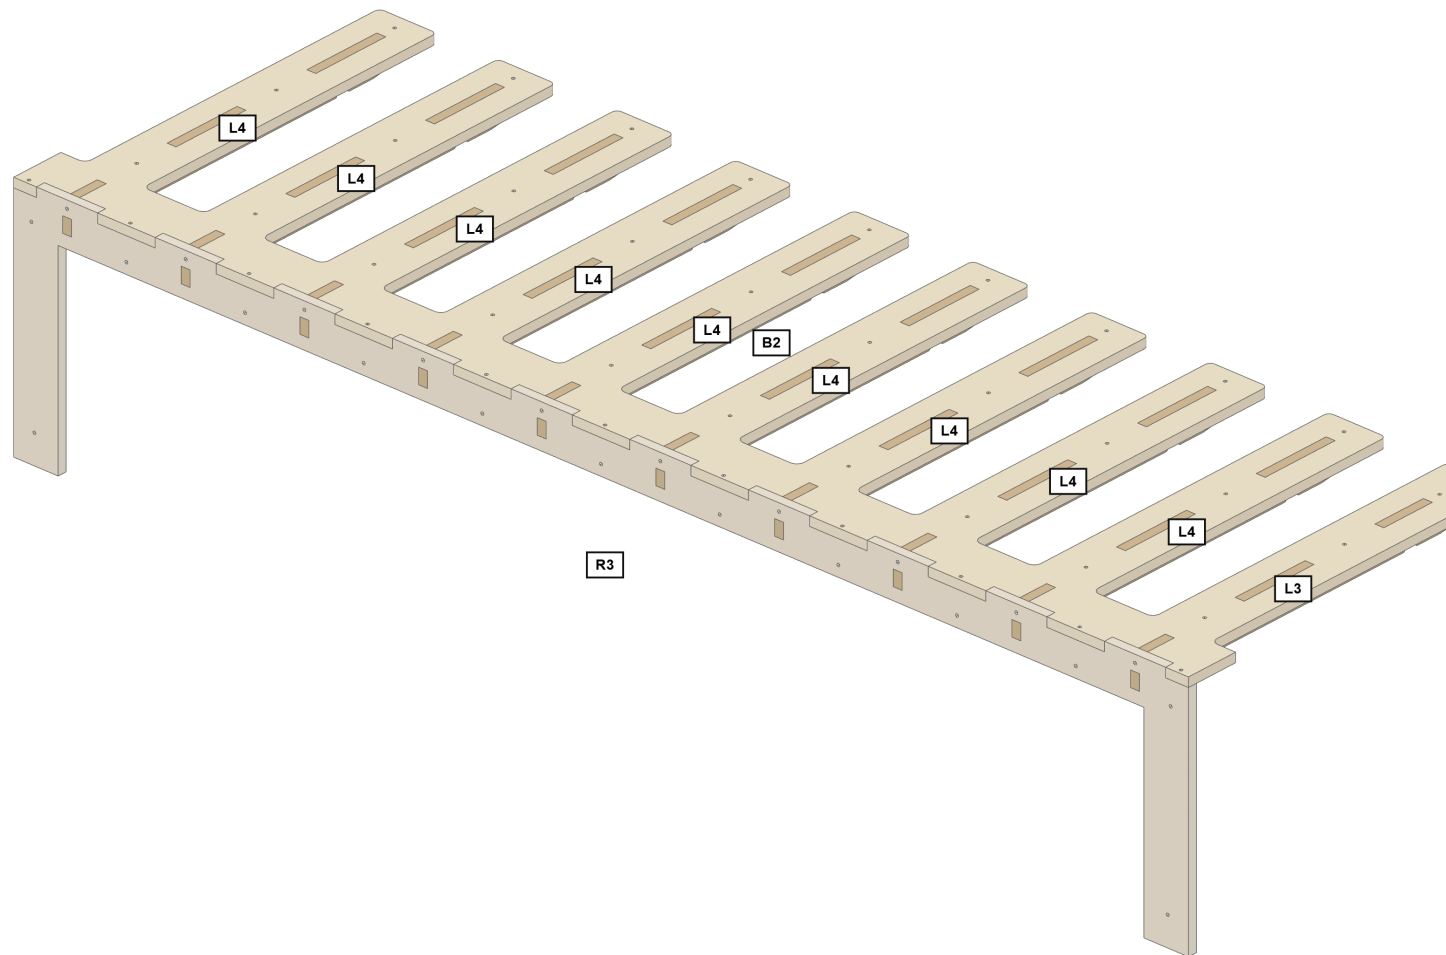


The extendable part of the bed: screw R3, B2, L3, L4 together. The carriage carries the front half of the lying surface and pulls out forwards.

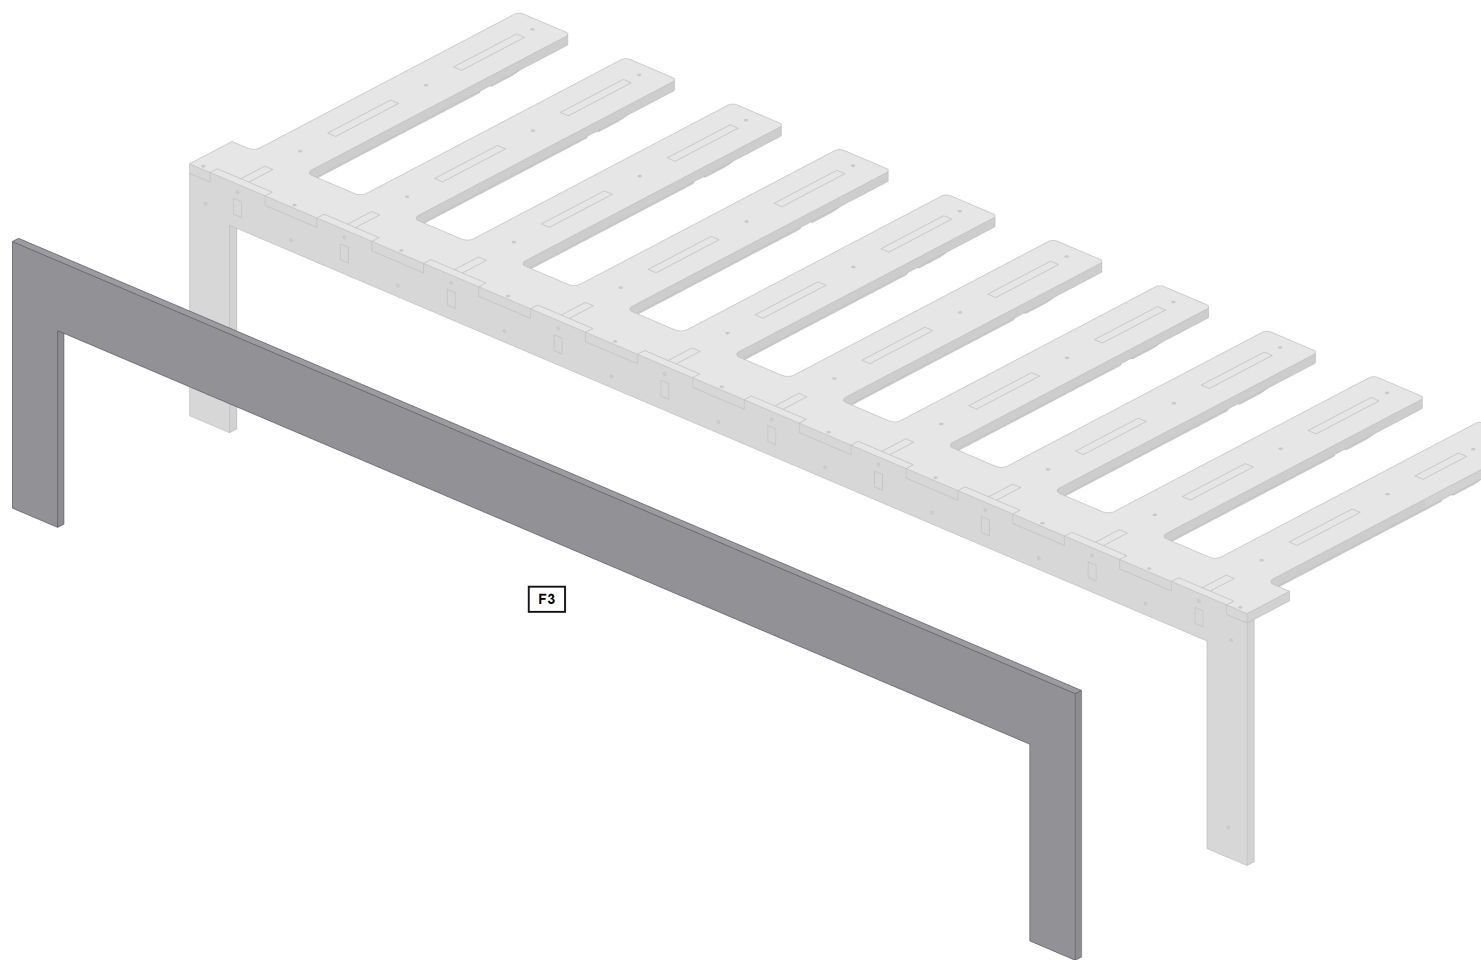


Mount the front panel (F3) like a drawer front: lay it on, the through-holes in the carriage sit over the blind holes of the front, screw from the inside.

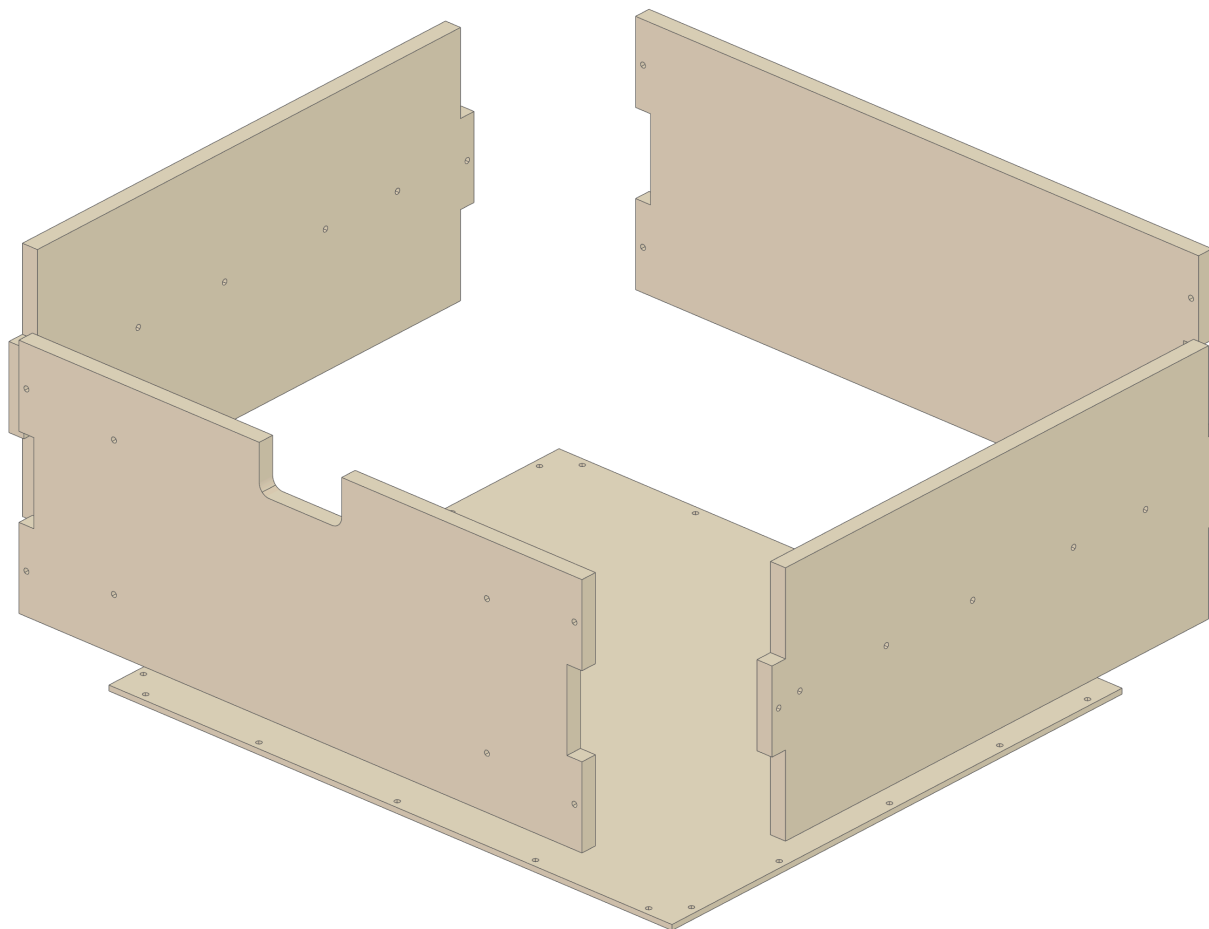


Assemble the boards of drawer 1: screw the four side parts together, then screw on the bottom from below. Check both diagonals so the box stays square.

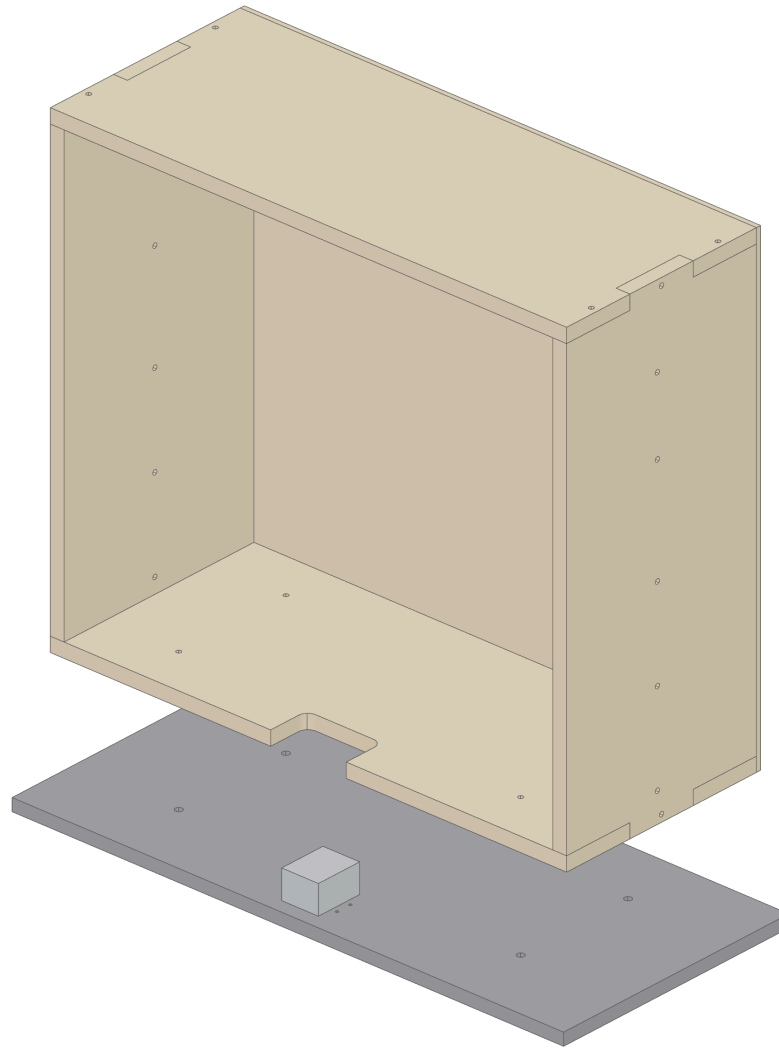


Lay front F1 flat on the table, visible side down, and set the drawer box onto it front side down: the through-holes of the box sit over the blind holes of the front. Screw from the inside – the screws must not pierce the visible side. Then screw the Everlock latch to the inside of the front, centred at the top (position as shown) – it keeps the drawer shut while driving.

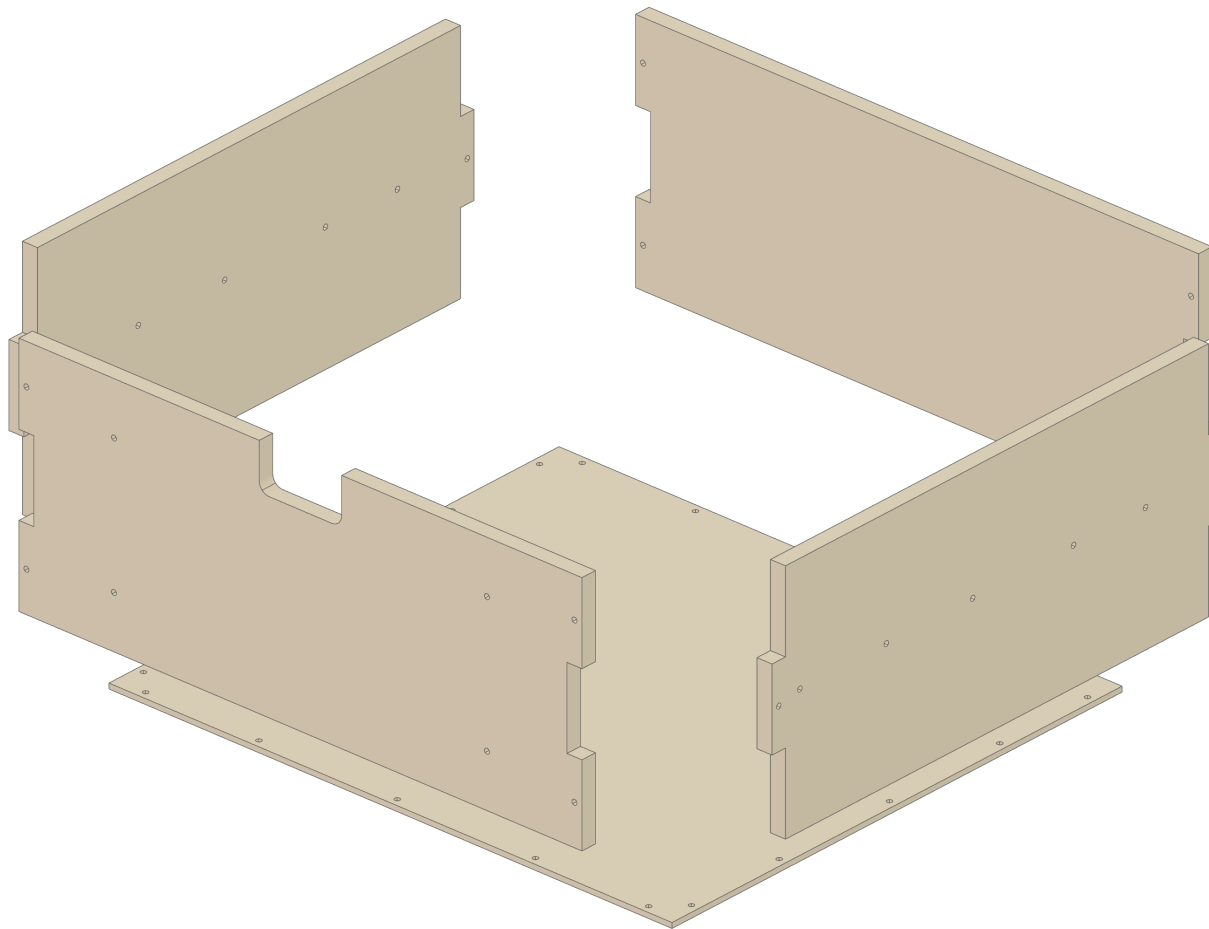


Assemble the boards of drawer 2: screw the four side parts together, then screw on the bottom from below. Check both diagonals so the box stays square.

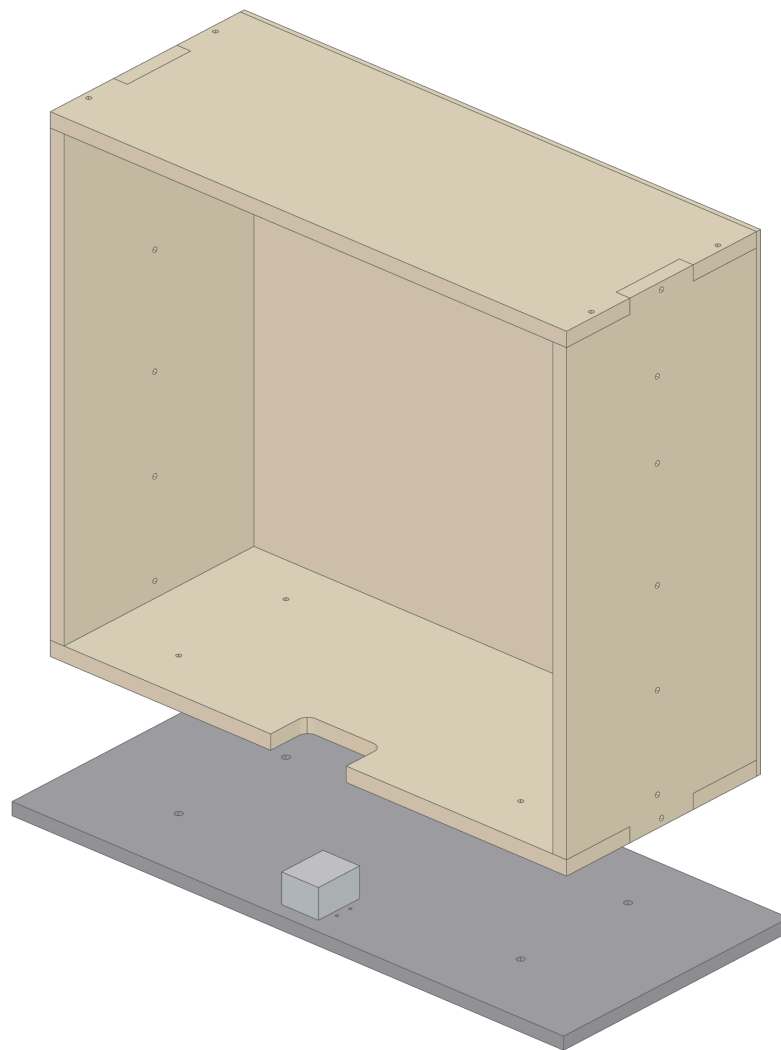


Lay front F2 flat on the table, visible side down, and set the drawer box onto it front side down: the through-holes of the box sit over the blind holes of the front. Screw from the inside – the screws must not pierce the visible side. Then screw the Everlock latch to the inside of the front, centred at the top (position as shown) – it keeps the drawer shut while driving.

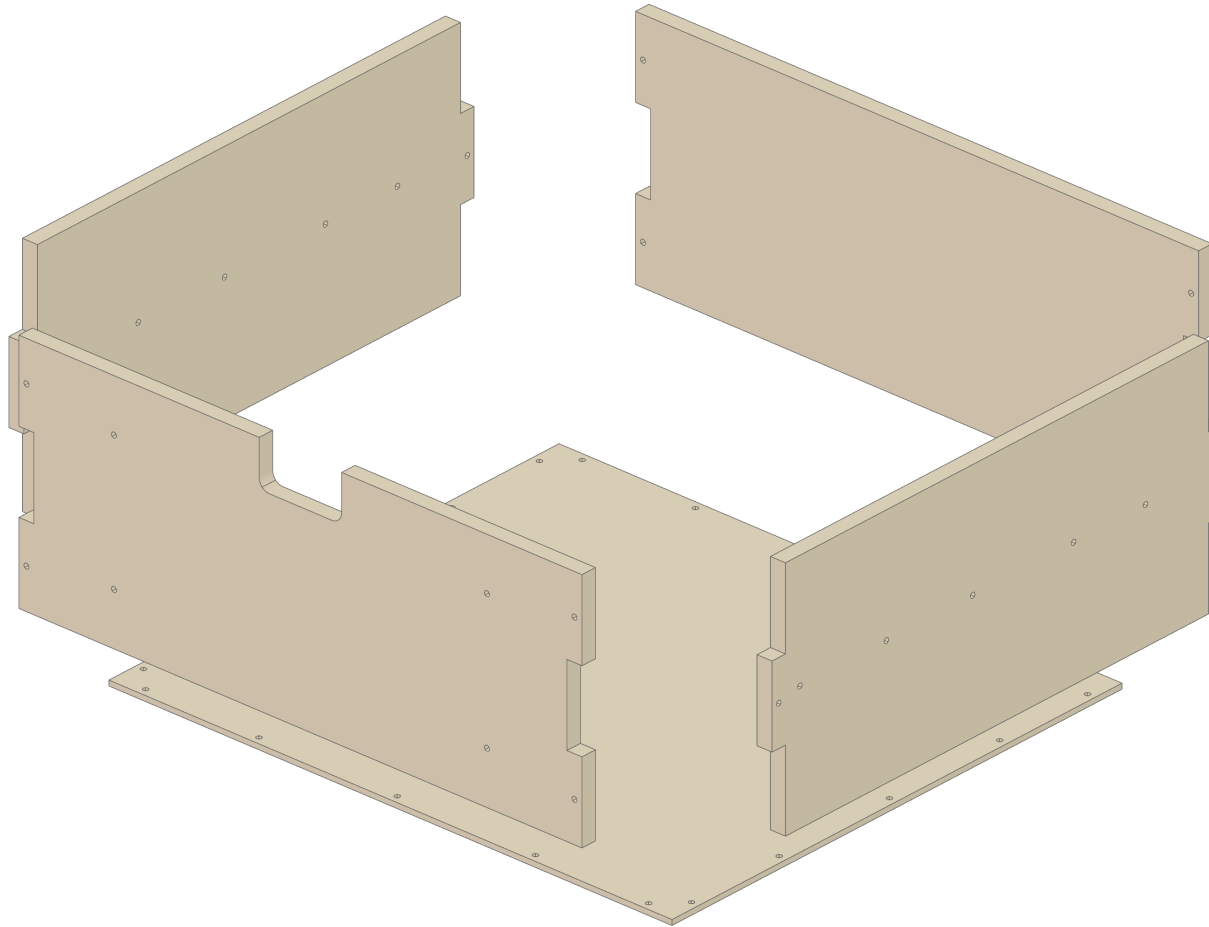


Assemble the boards of drawer 3: screw the four side parts together, then screw on the bottom from below. Check both diagonals so the box stays square.

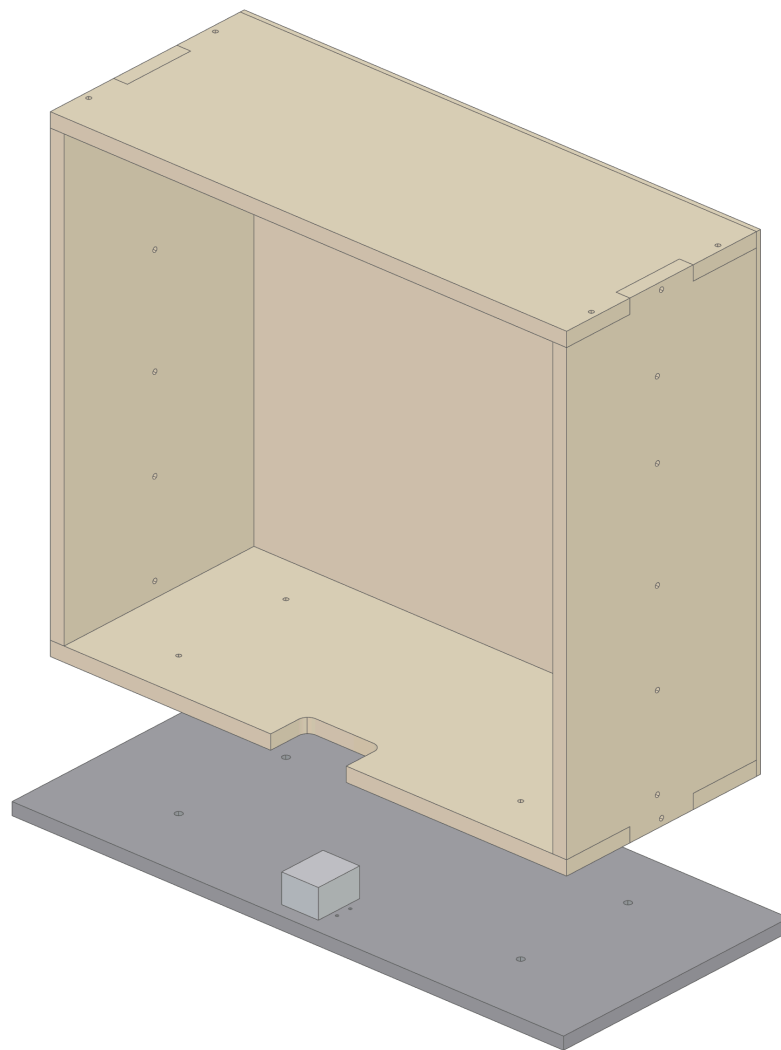

Lay front F2 flat on the table, visible side down, and set the drawer box onto it front side down: the through-holes of the box sit over the blind holes of the front. Screw from the inside – the screws must not pierce the visible side. Then screw the Everlock latch to the inside of the front, centred at the top (position as shown) – it keeps the drawer shut while driving.

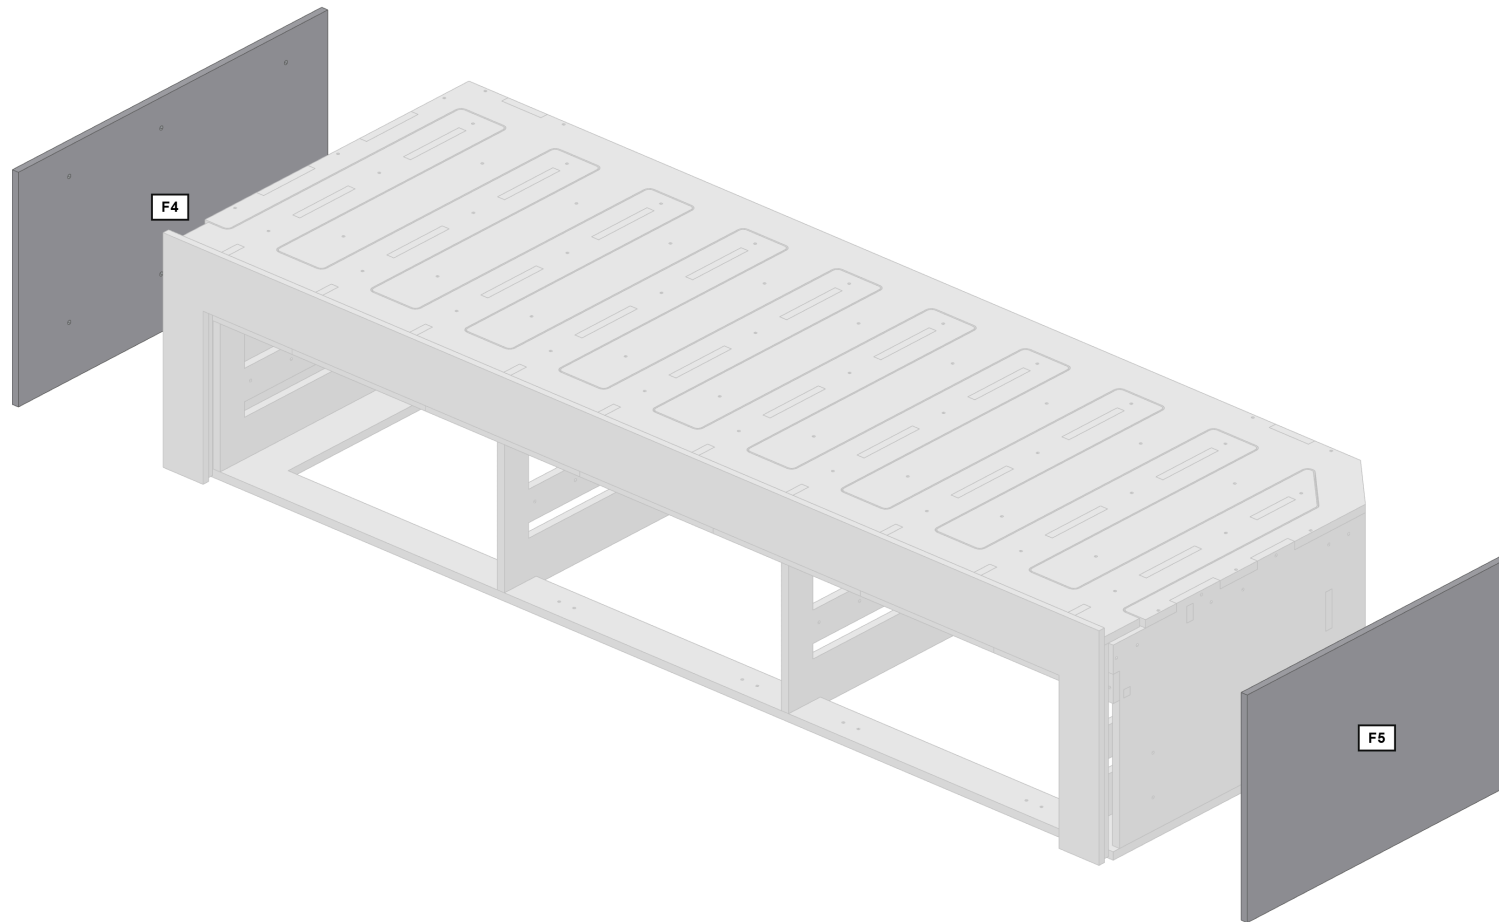

Finally screw the panels F5, F4 to the body using the pre-drilled holes. They close off the body – align them flush before tightening.

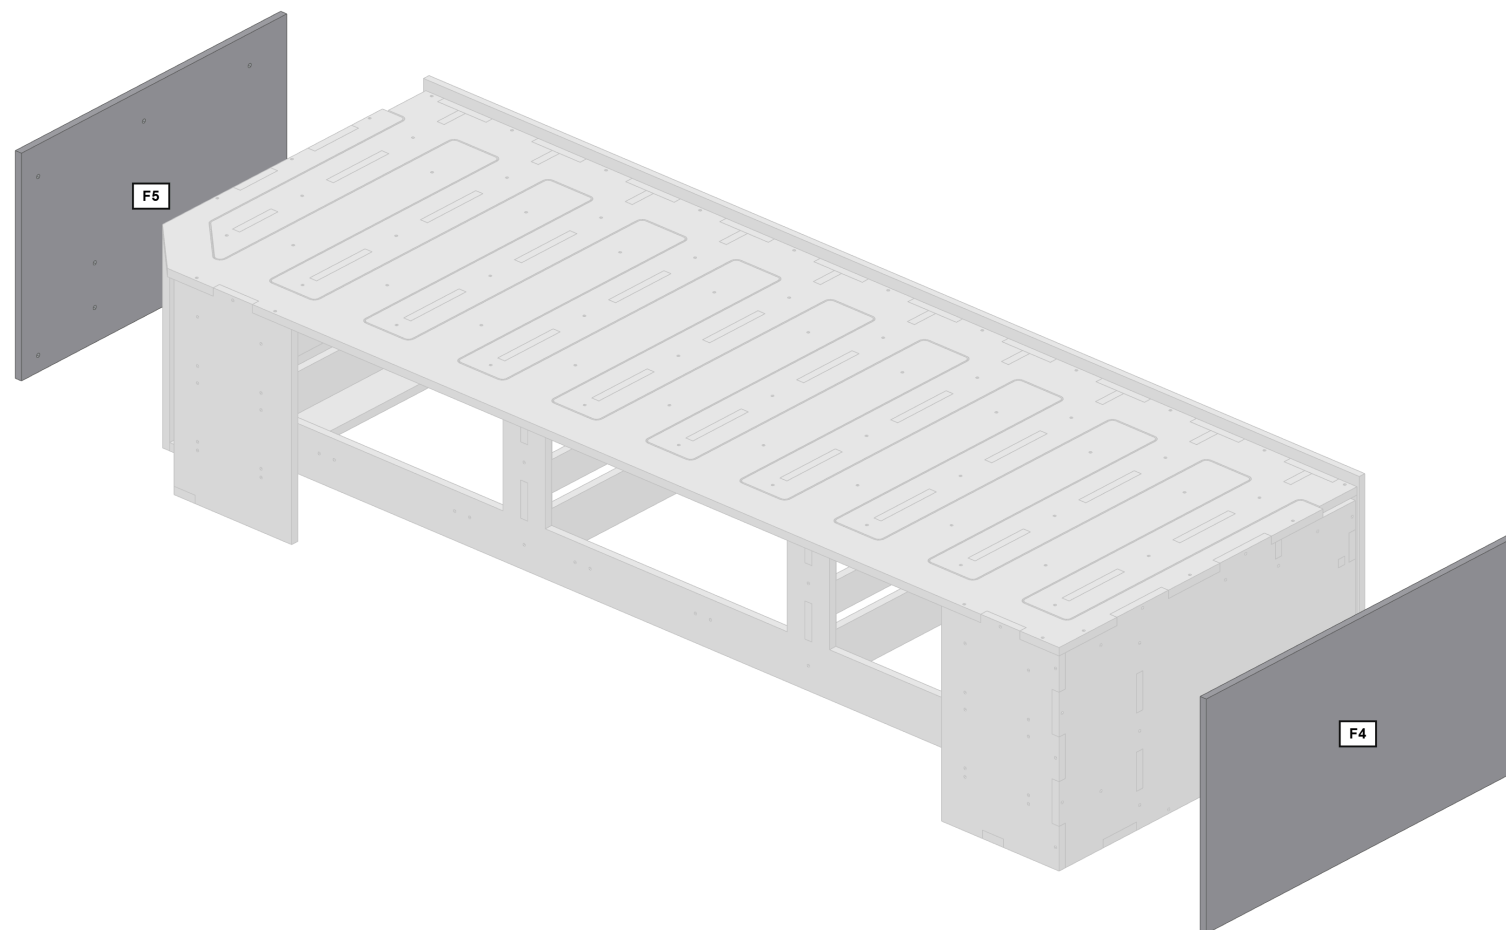


The same bed seen from the opposite side: here are the panels that were hidden in the previous view. Align all panels flush and tighten.

DONE!

JULI VANSYSTEM

Everlock connectors: 3 pcs

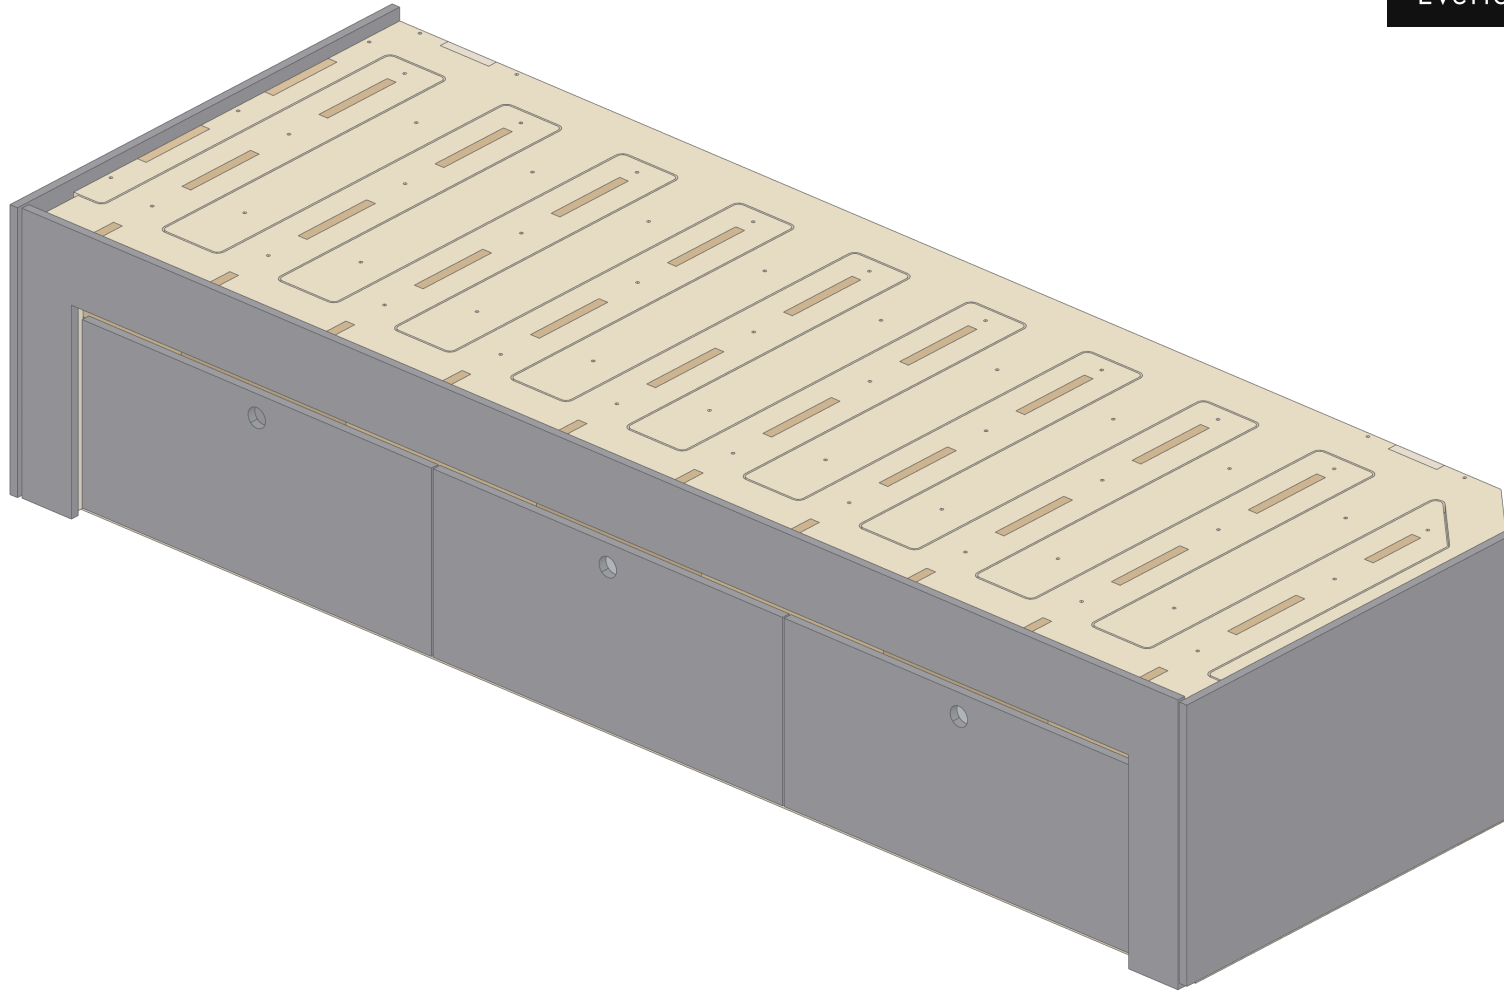

YOUR FURNITURE MODULE IS READY.

Mounting in the vehicle: hook into the base build with the Everlock connectors and lock – all sets & the 3D configurator at juli-vansystem.com