




**JULI VANSYSTEM**

**ASSEMBLY INSTRUCTIONS · FURNITURE MODULE**

# **WALL CABINET WIDE – MAN TGE / VW CRAFTER**

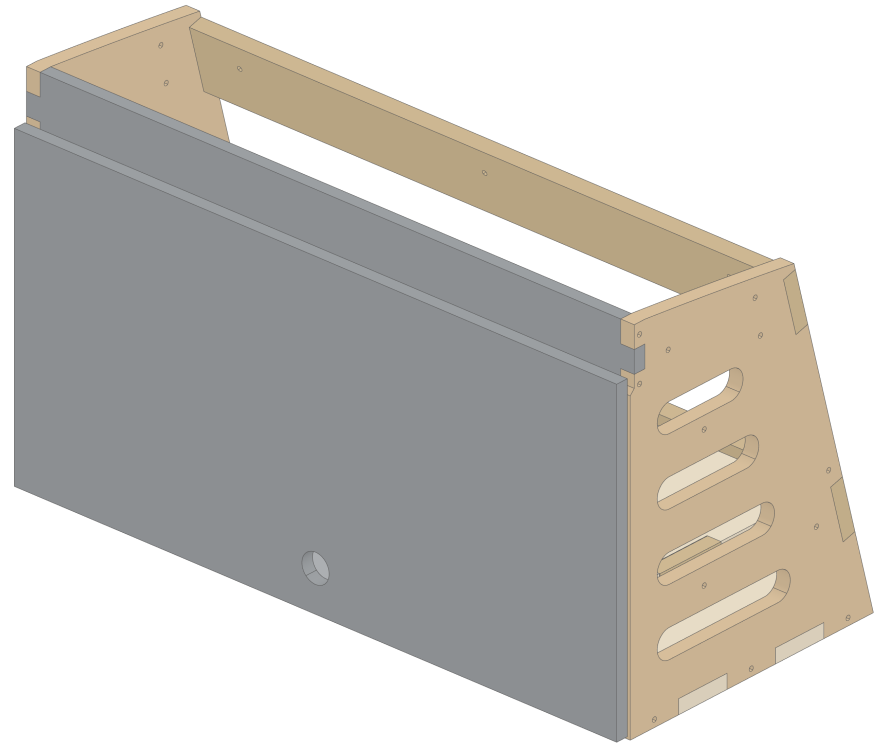

# **H2**

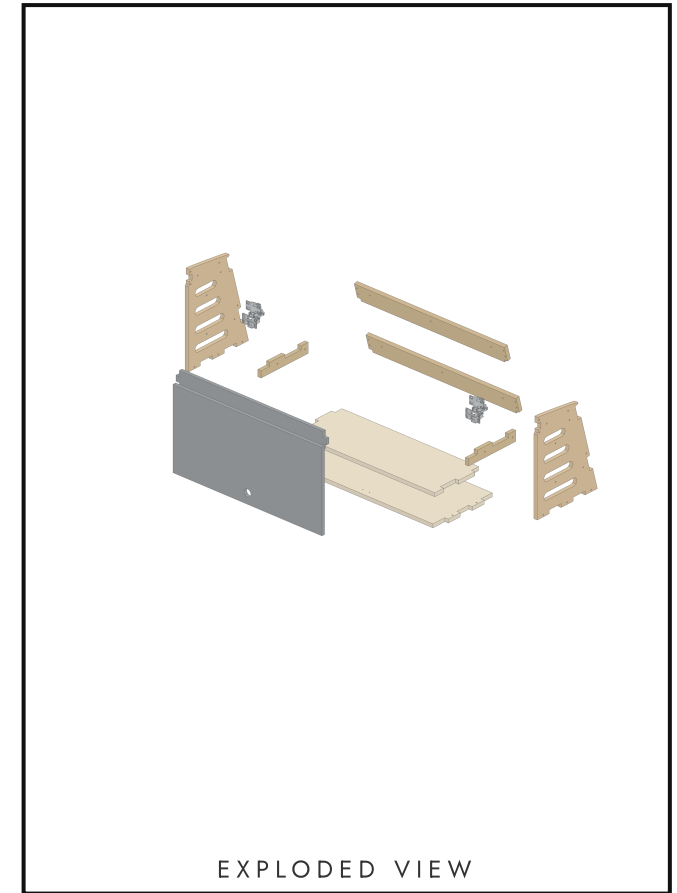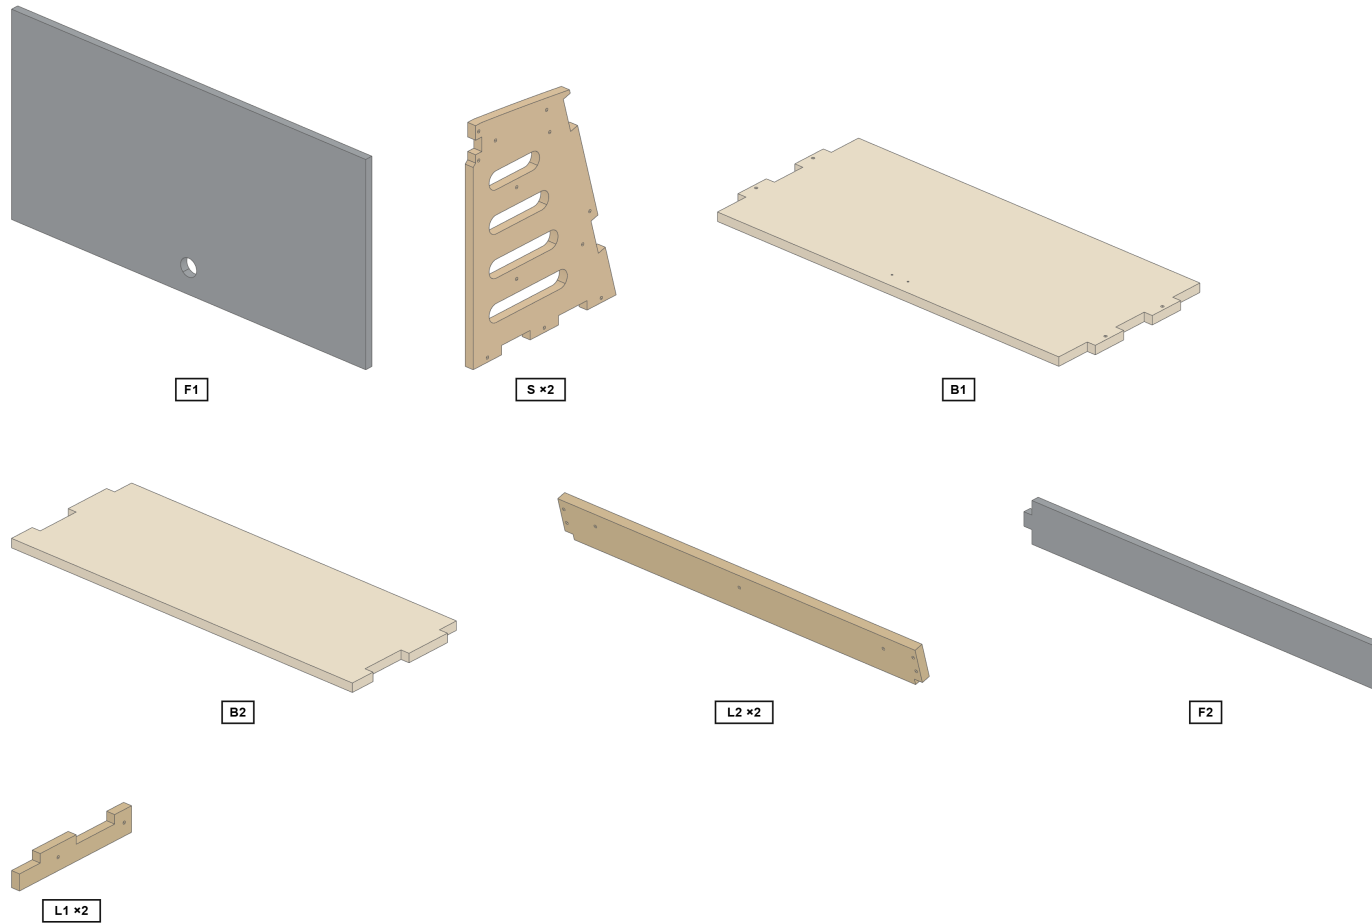

**13**

PARTS TOTAL

**8**


BODY PARTS

**2**


FRONTS / DRAWERS

**1**

EVERLOCK CONNECTORS

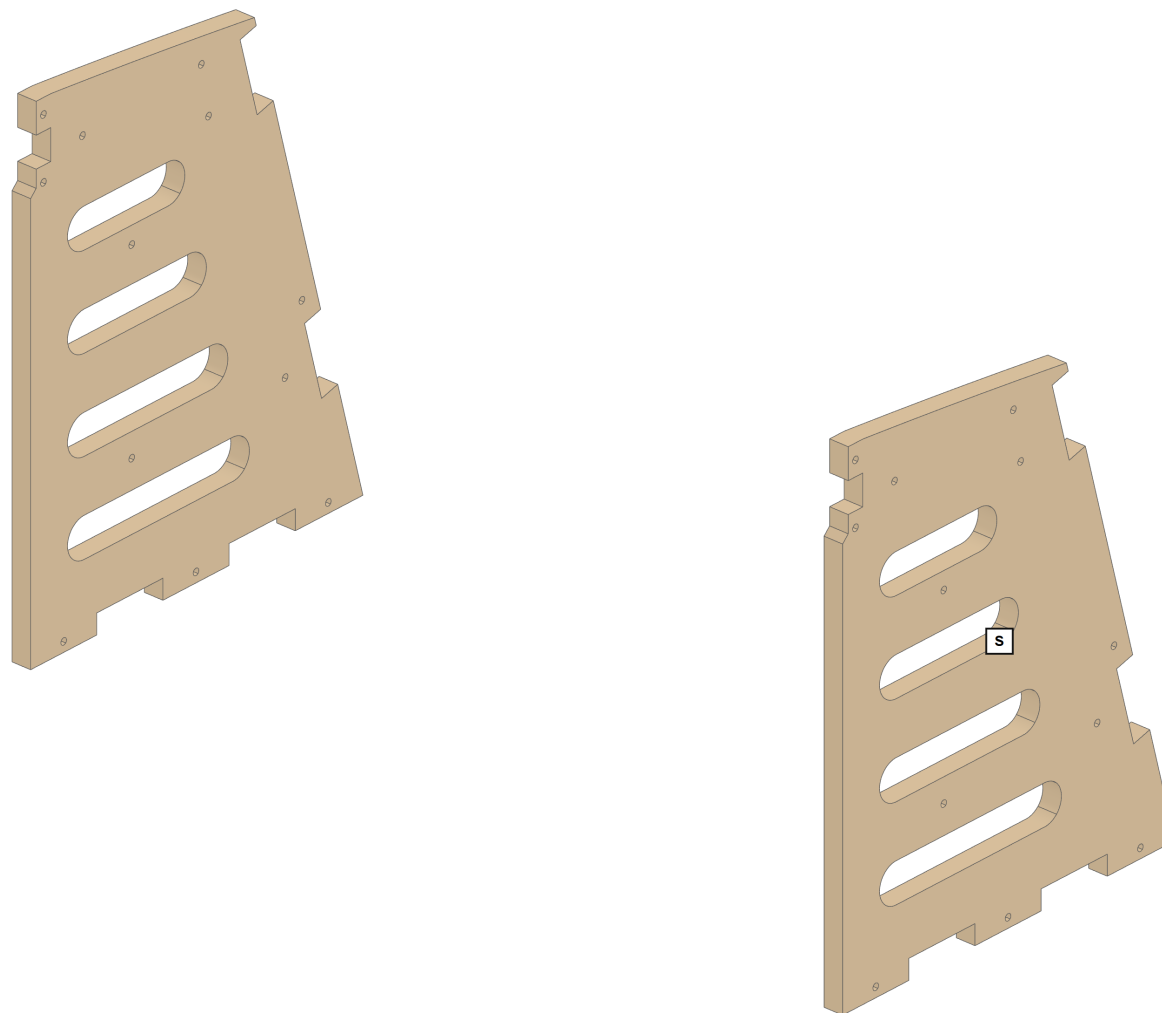


Screw the side panels (S) together to form the body – same code = identical parts, the position follows from the pre-drilled holes. Check for square alignment before fully tightening all screws.

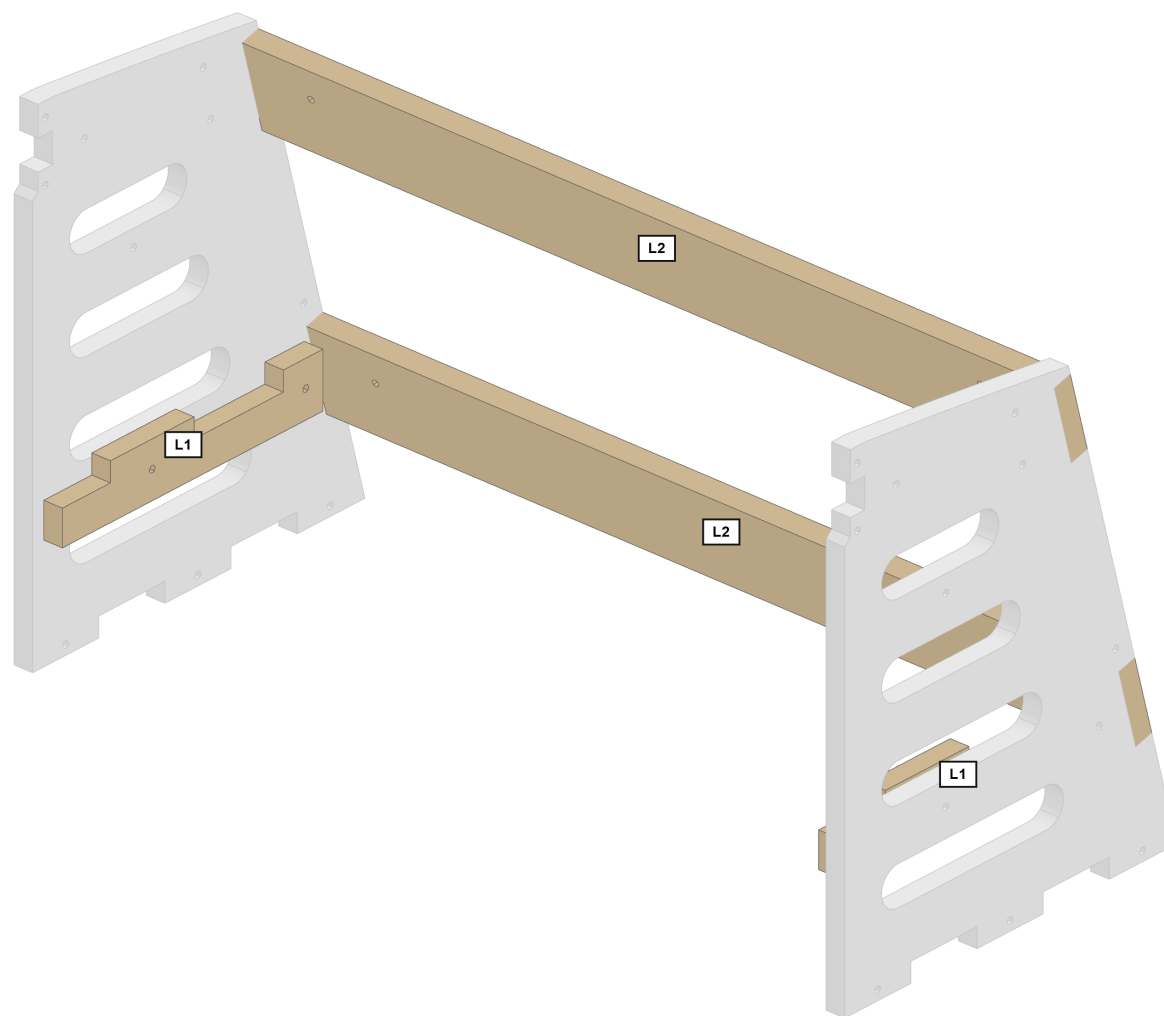


Fasten the strips (L1 to L2) to the inner faces – the positions are pre-drilled. They support Euroboxes or shelves and stabilise the body.




Control view from the front: the position of all strips on both sides. Note for the narrow cabinets – left and right side have different layouts.

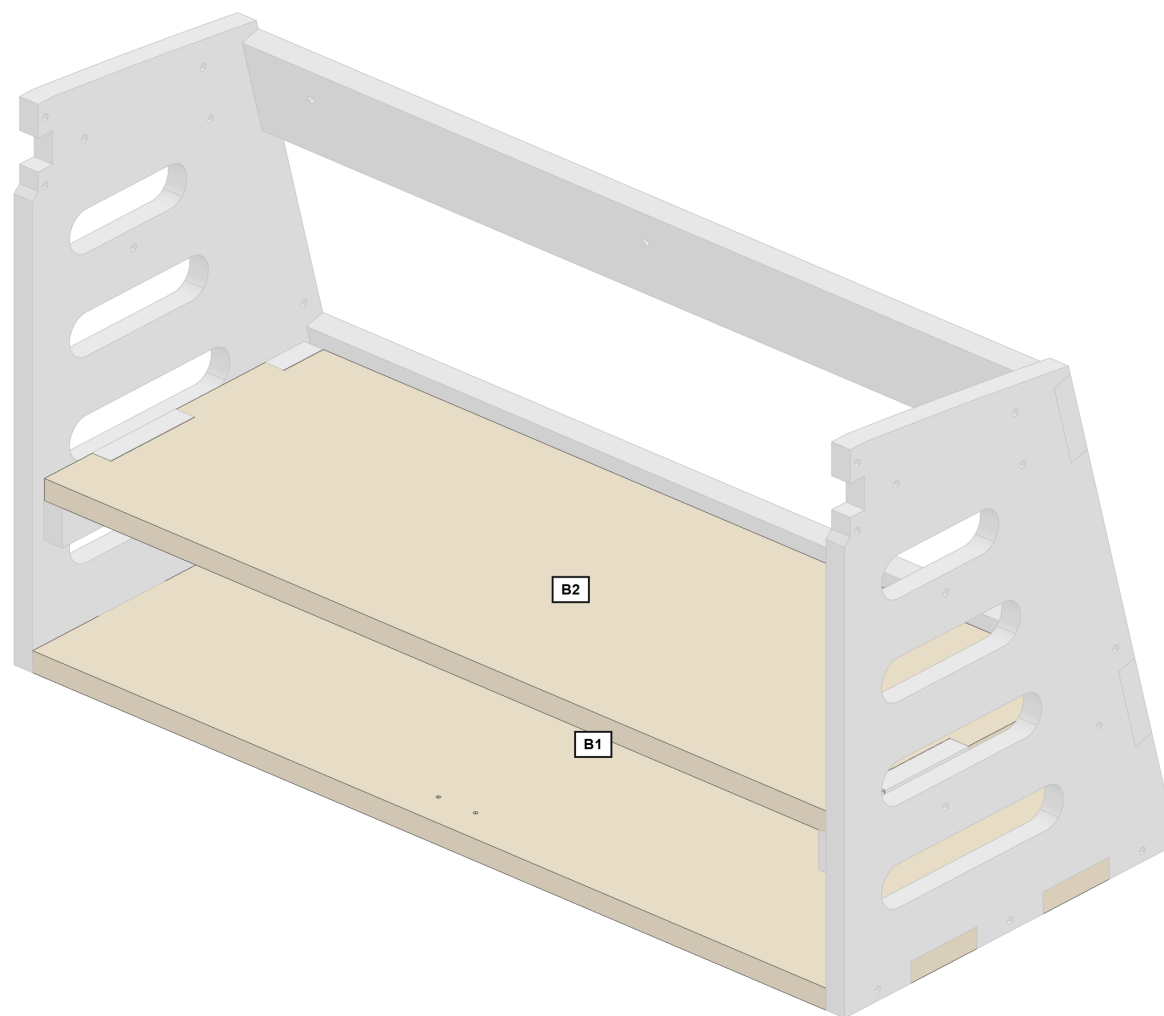


Place the shelves (B1 to B2) onto the mounted strips and fasten them – all shelves are identical.

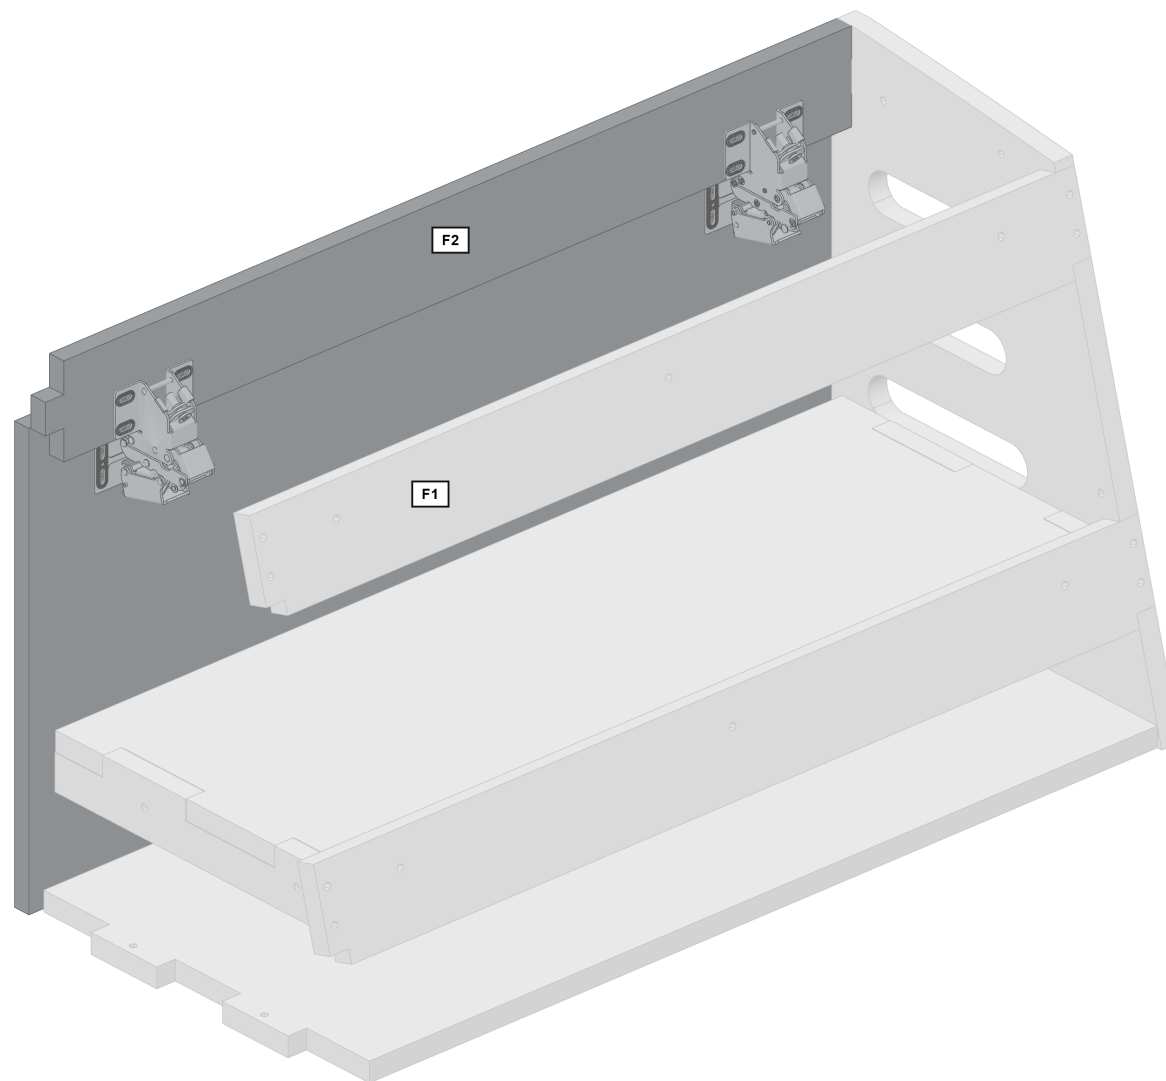

Screw the flap fittings to the pre-drilled positions on the inner faces of the body, then insert the flap (F1 to F2) and fasten it to the fittings. The fittings guide the flap and hold it in the open position.

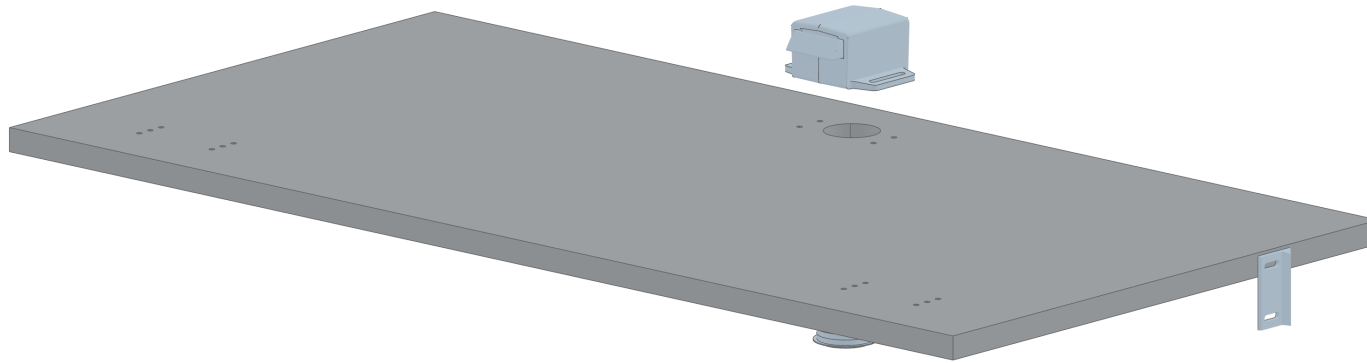

Screw the Everlock lock body onto the inside of the front – rotated so that its slotted holes sit over the pre-drilled holes. Insert the bezel from the visible side (below), in line with the grip hole. The stainless steel striker bracket mounts on the body – see next page. The spring-loaded lock engages automatically when closing; to open, press the lever with a finger through the hole.

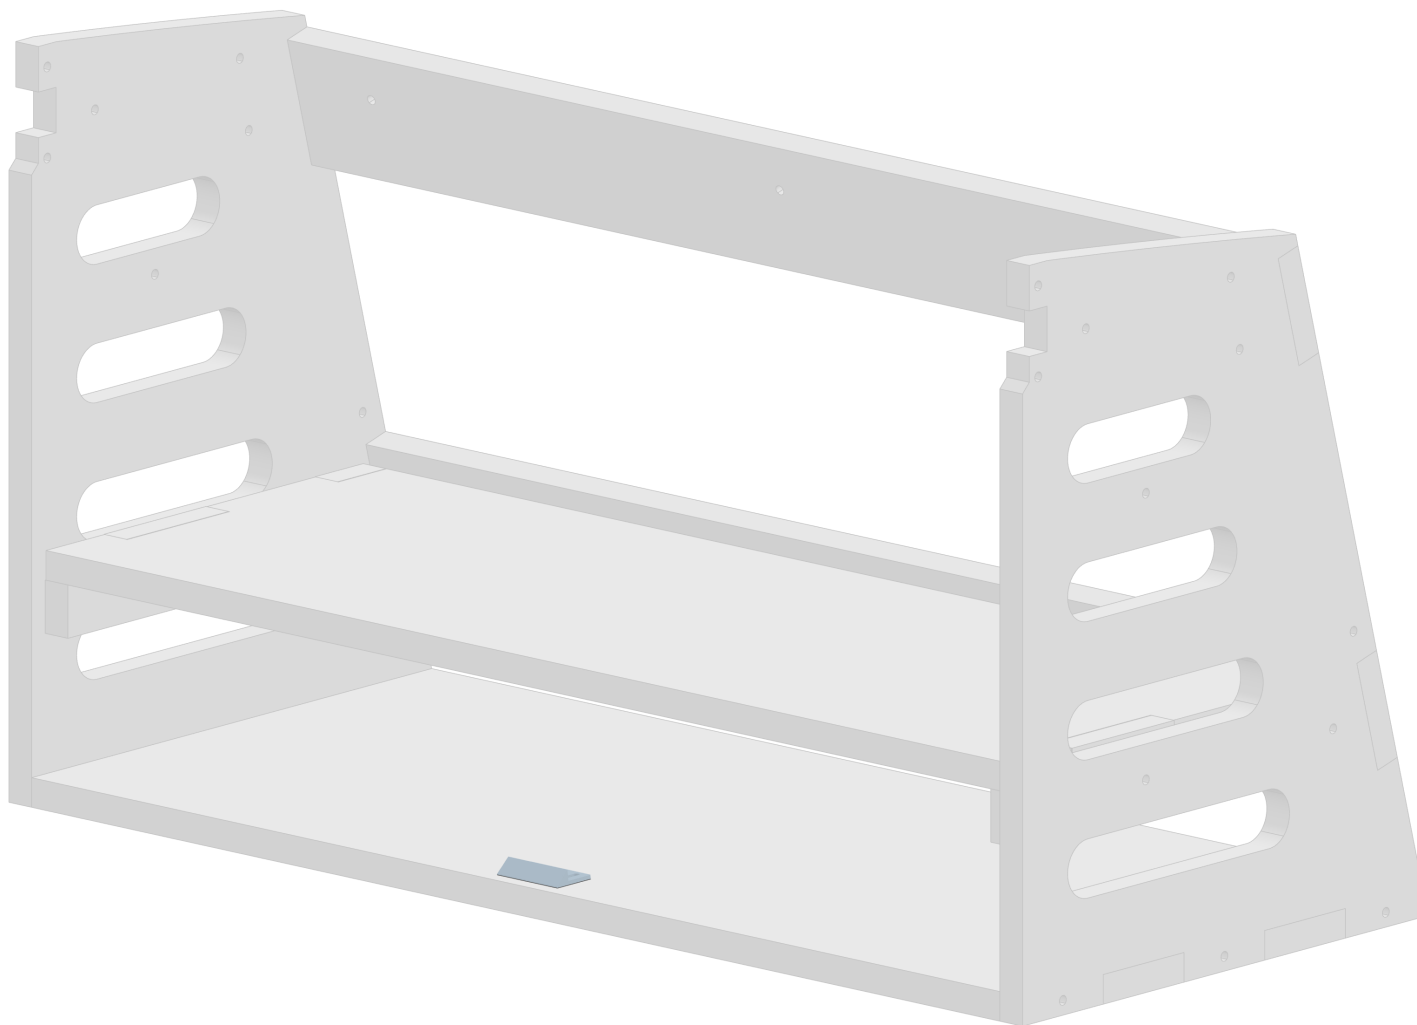


Screw the stainless steel striker brackets from below to the front top rail (T1): on double-door cabinets at both hole pairs in the middle area, on single-door bodies at the outer position left or right – on the handle side, depending on the door hinge side. The slotted holes allow adjustment; the lock engages on the bracket when closing.

# DONE!

JULI VANSYSTEM

Everlock connectors: 1 pcs

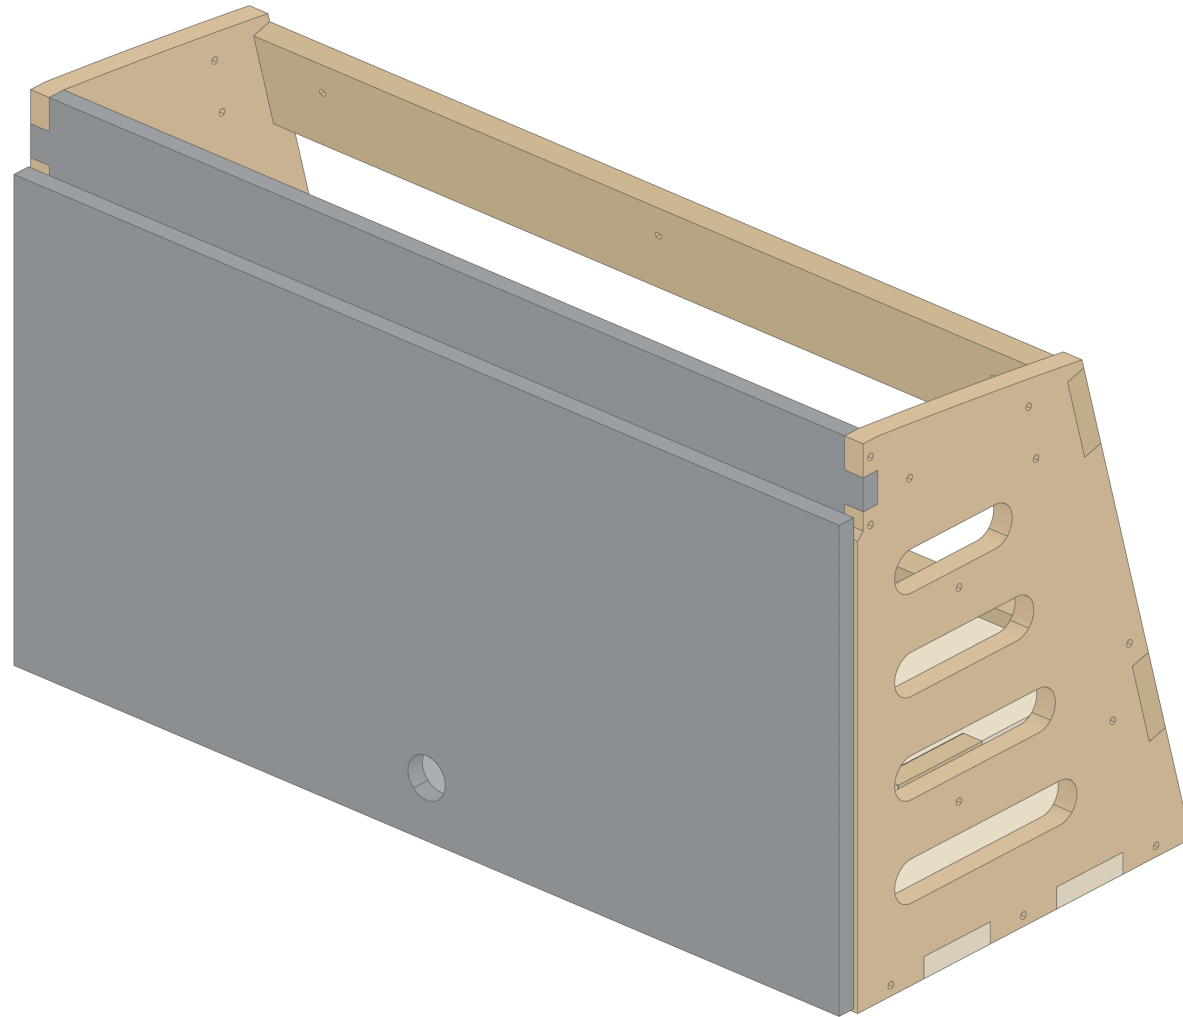

## YOUR FURNITURE MODULE IS READY.

Mounting in the vehicle: hook into the base build with the Everlock connectors and lock — all sets & the 3D configurator at [juli-vansystem.com](https://juli-vansystem.com)