




JULI VANSYSTEM

ASSEMBLY INSTRUCTIONS · FURNITURE MODULE

**TALL CABINET
NARROW –
MERCEDES
SPRINTER H2
(RIGHT)**

H2

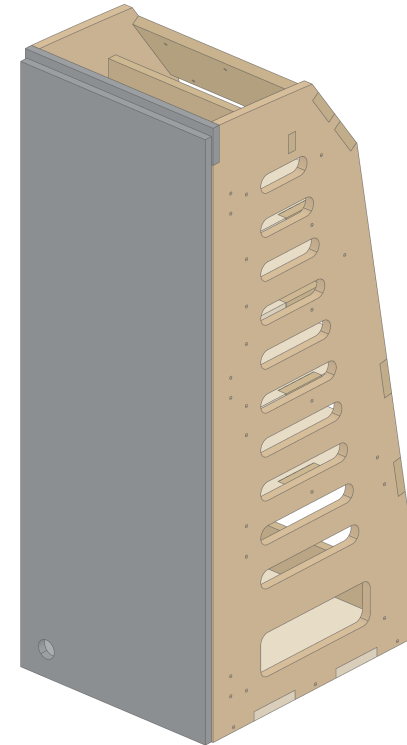

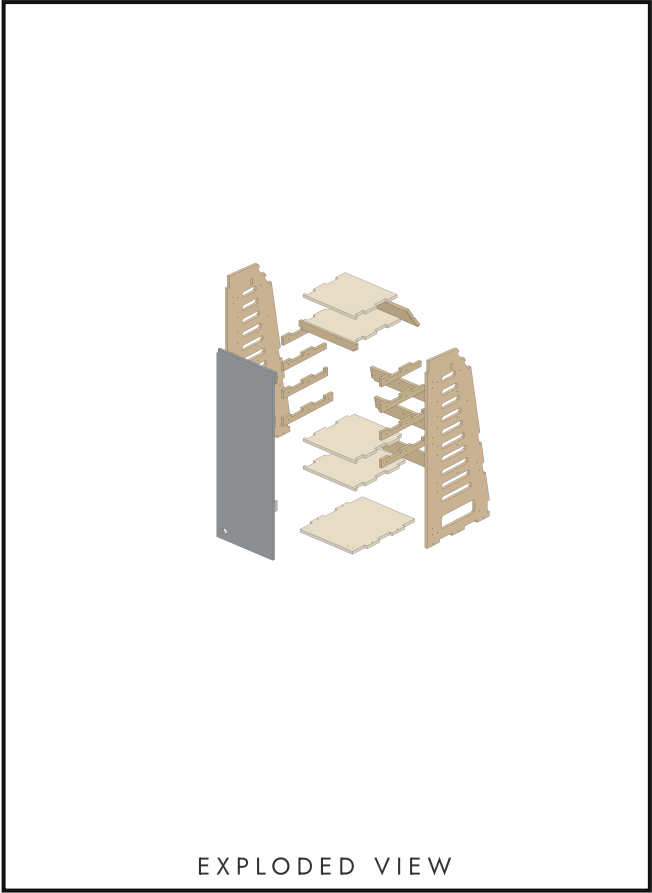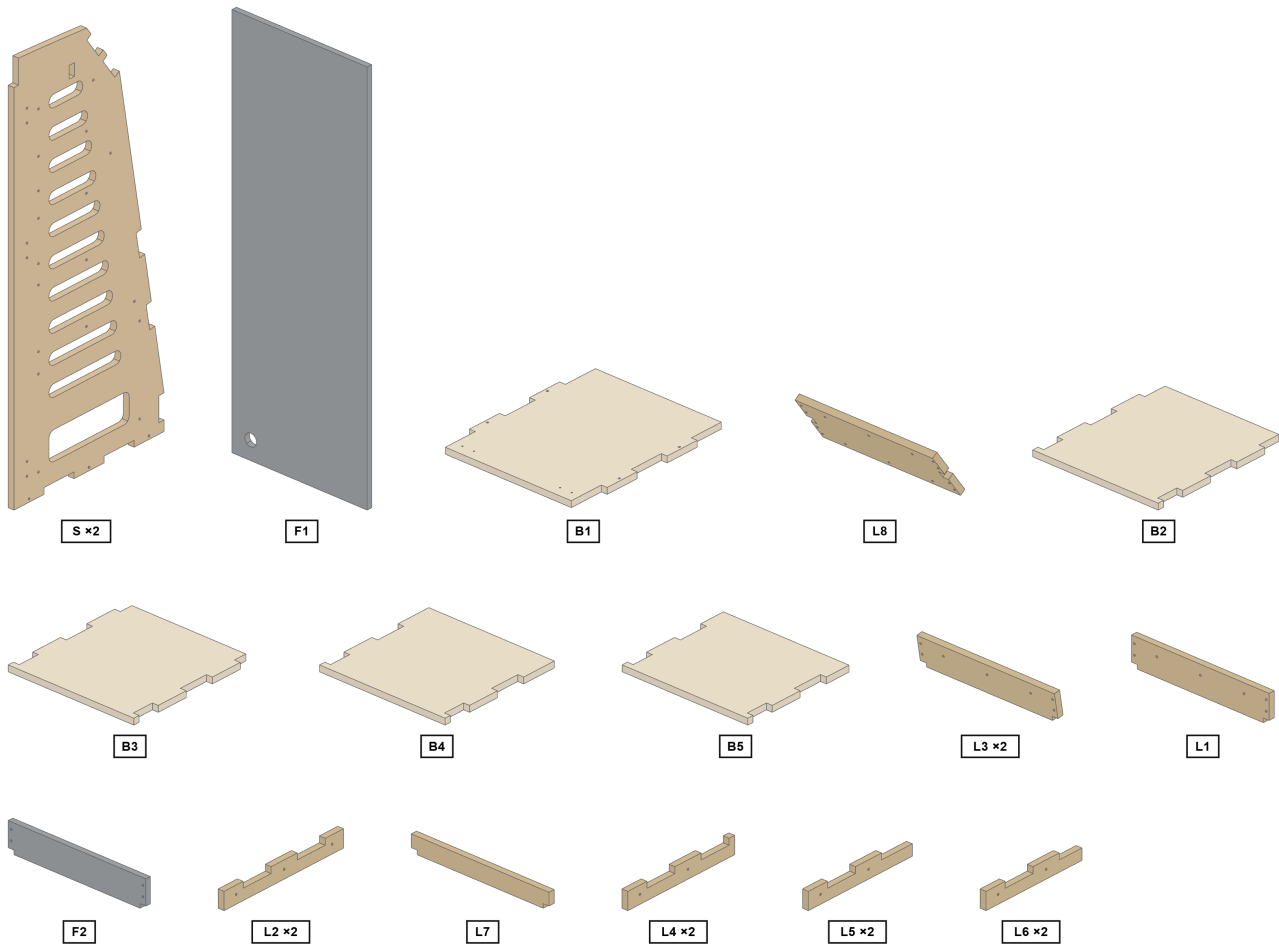

23

PARTS TOTAL

20


BODY PARTS

2


FRONTS / DRAWERS

1


EVERLOCK CONNECTORS

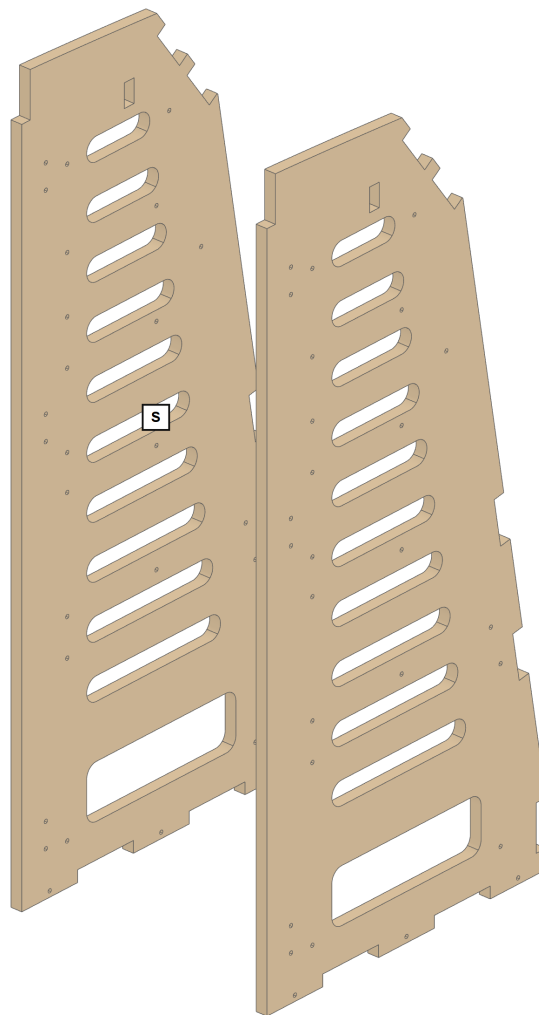


Screw the side panels (S) together to form the body – same code = identical parts, the position follows from the pre-drilled holes. Check for square alignment before fully tightening all screws.

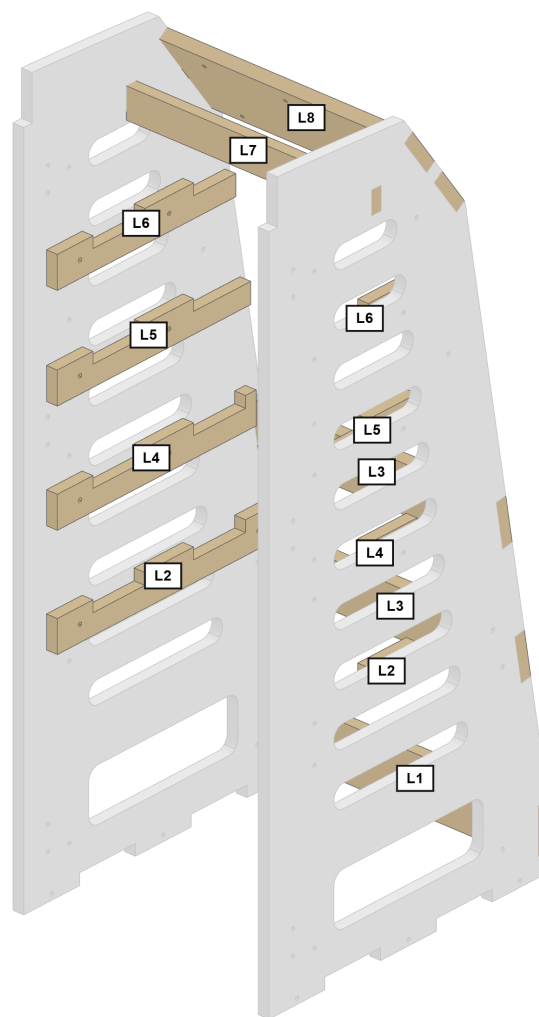


Fasten the strips (L1 to L8) to the inner faces – the positions are pre-drilled. They support Euroboxes or shelves and stabilise the body.

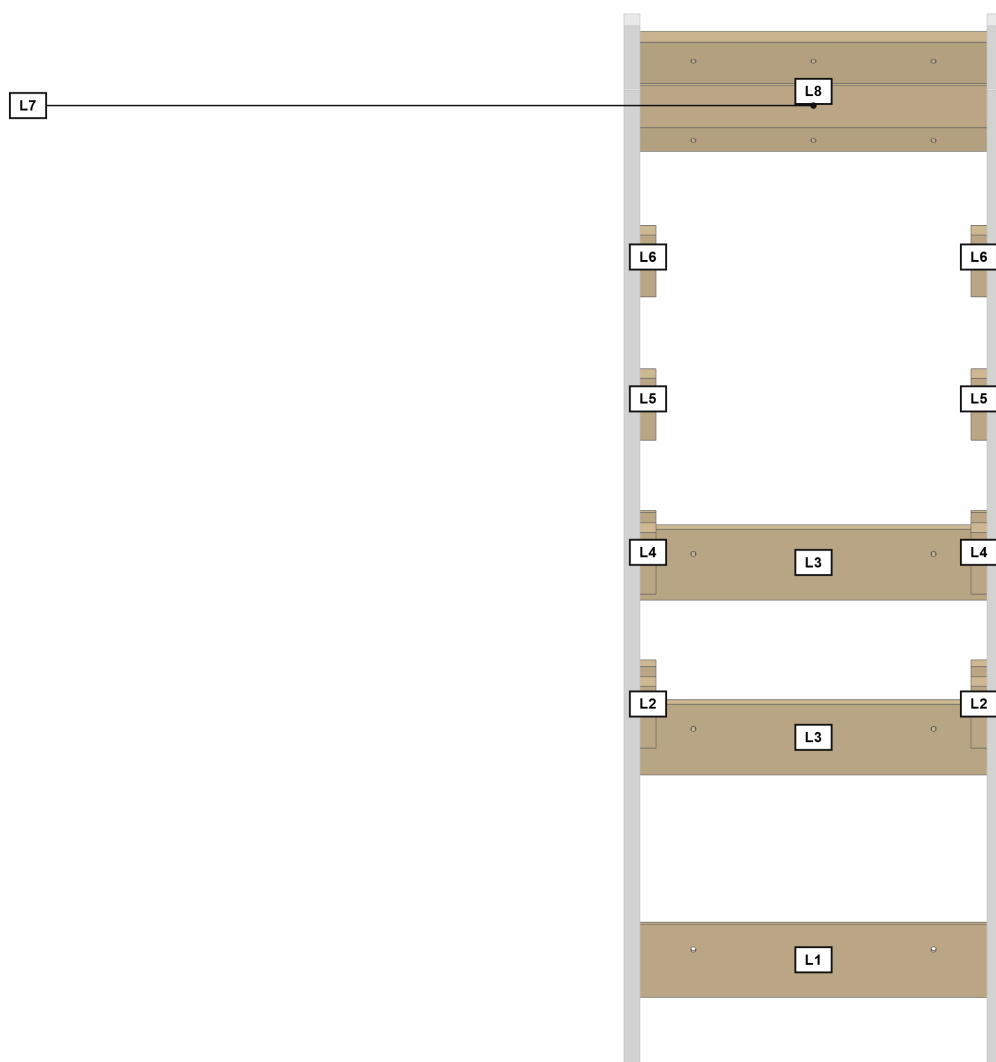


Control view from the front: the position of all strips on both sides. Note for the narrow cabinets – left and right side have different layouts.

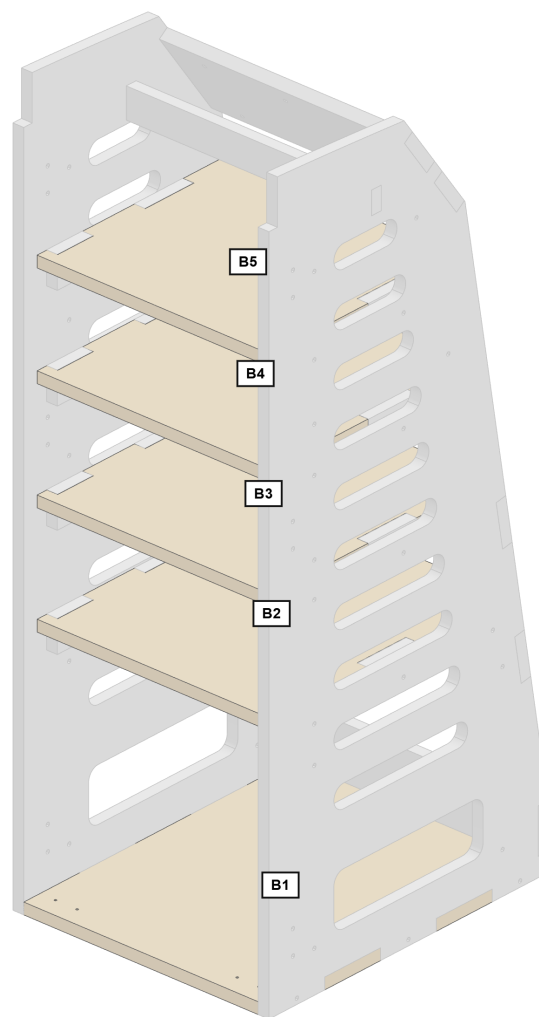


Place the shelves (B1 to B5) onto the mounted strips and fasten them – all shelves are identical.

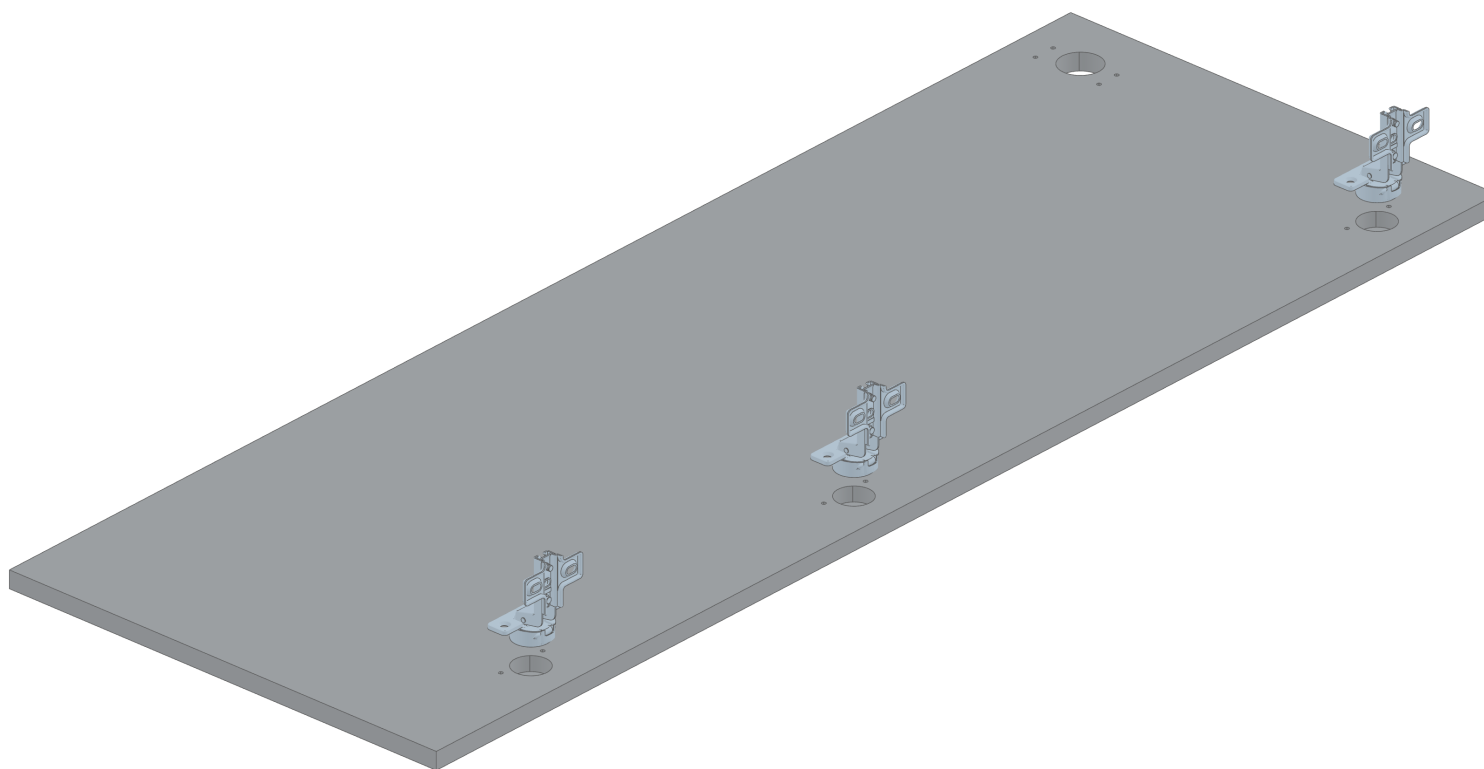


Lay the door flat on the table with its visible side down. Insert the cup hinges (Riex NS30, Ø 26 mm cup) into the pre-drilled cup holes, align the arm square to the door edge and screw the cup tight.

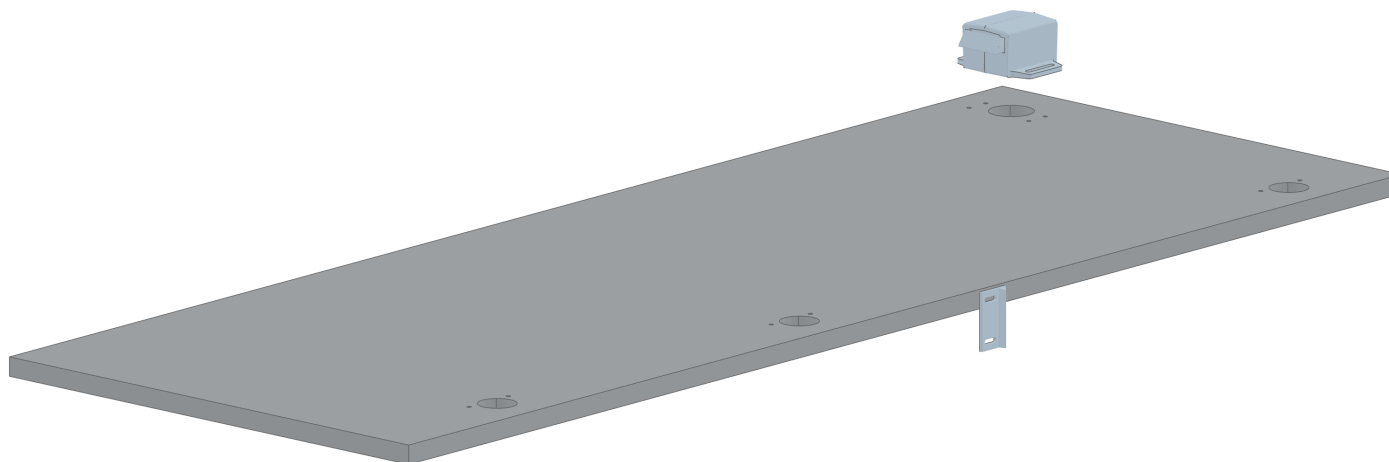

Screw the Everlock lock body onto the inside of the front – rotated so that its slotted holes sit over the pre-drilled holes. Insert the bezel from the visible side (below), in line with the grip hole. The stainless steel striker bracket mounts on the body – see next page. The spring-loaded lock engages automatically when closing; to open, press the lever with a finger through the hole.

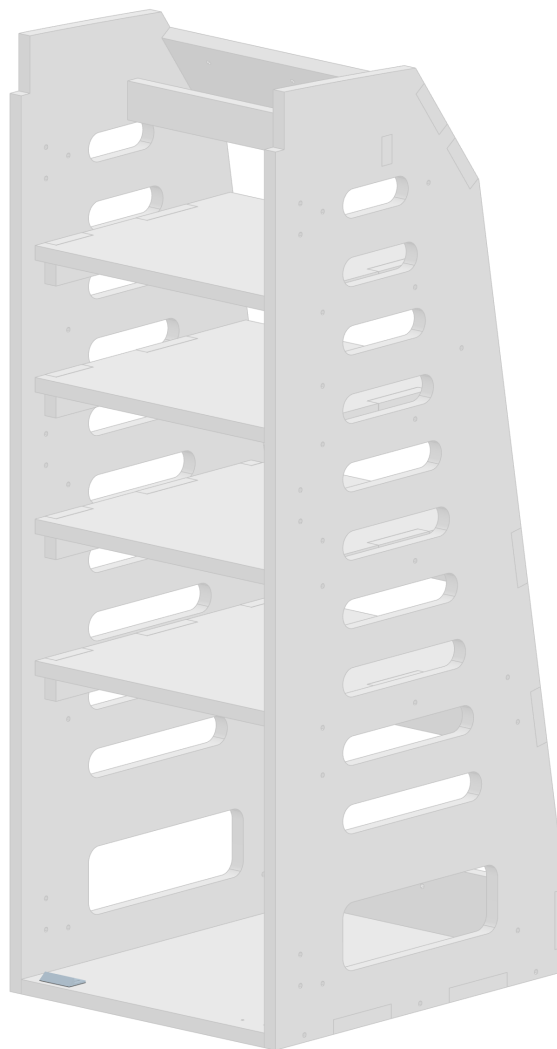

Screw the stainless steel striker brackets from below to the front top rail (T1): on double-door cabinets at both hole pairs in the middle area, on single-door bodies at the outer position left or right – on the handle side, depending on the door hinge side. The slotted holes allow adjustment; the lock engages on the bracket when closing.

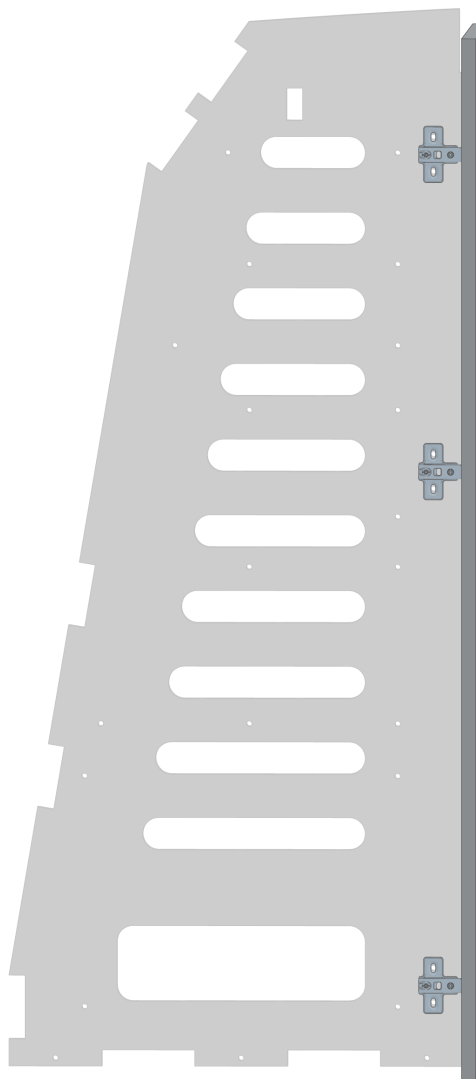


The view shows the hinge wall from the inside: screw the mounting plates to the marked pre-drilled holes, then slide the door with its hinge arms onto the plates (slide-on) and tighten the clamping screw – use the same screw to adjust the gap, the slotted holes allow height adjustment. A second door is mounted mirror-image on the opposite wall.

DONE!

JULI VANSYSTEM

Everlock connectors: 1 pcs

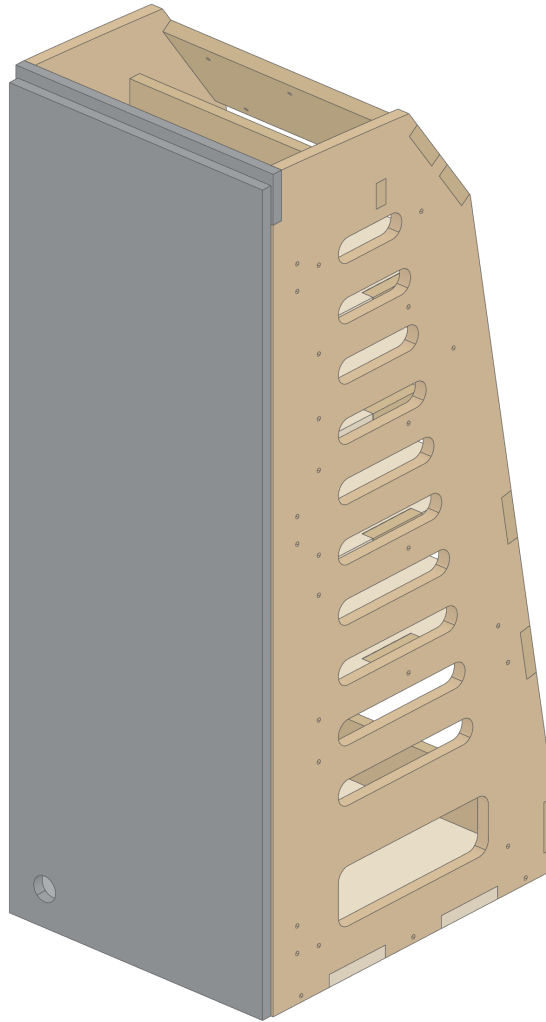

YOUR FURNITURE MODULE IS READY.

Mounting in the vehicle: hook into the base build with the Everlock connectors and lock — all sets & the 3D configurator at juli-vansystem.com