




JULI VANSYSTEM

ASSEMBLY INSTRUCTIONS · FURNITURE MODULE

TRANSVERSE BED 140

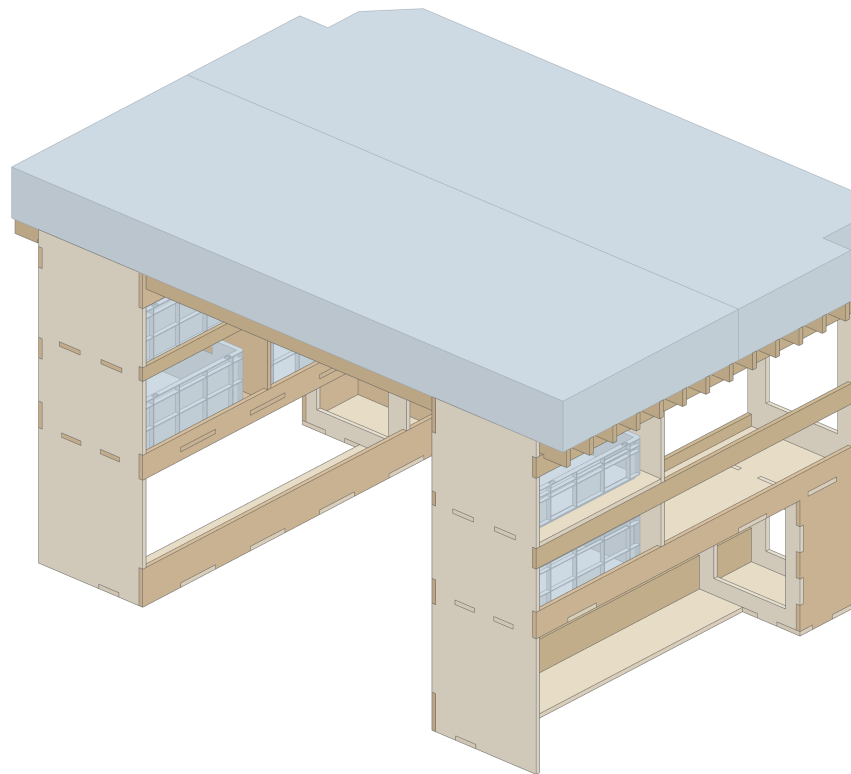

140

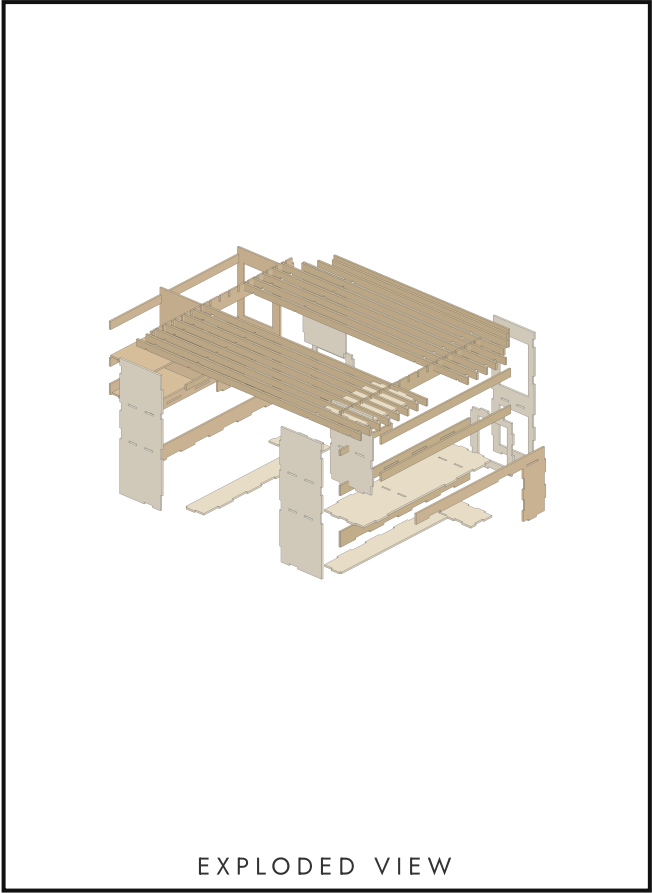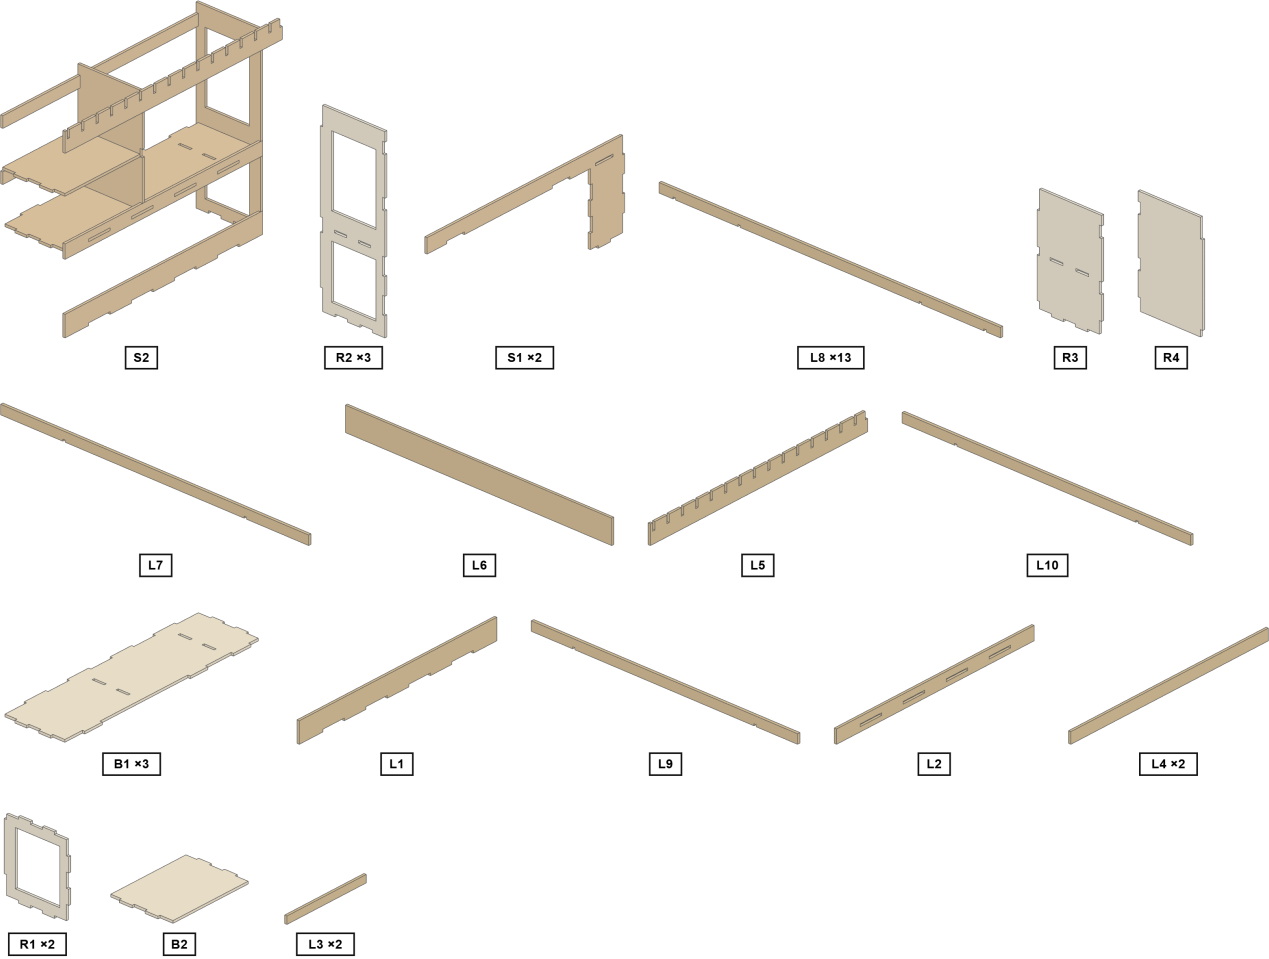

41

PARTS TOTAL

38


BODY PARTS

0


FRONTS / DRAWERS

—


EVERLOCK CONNECTORS

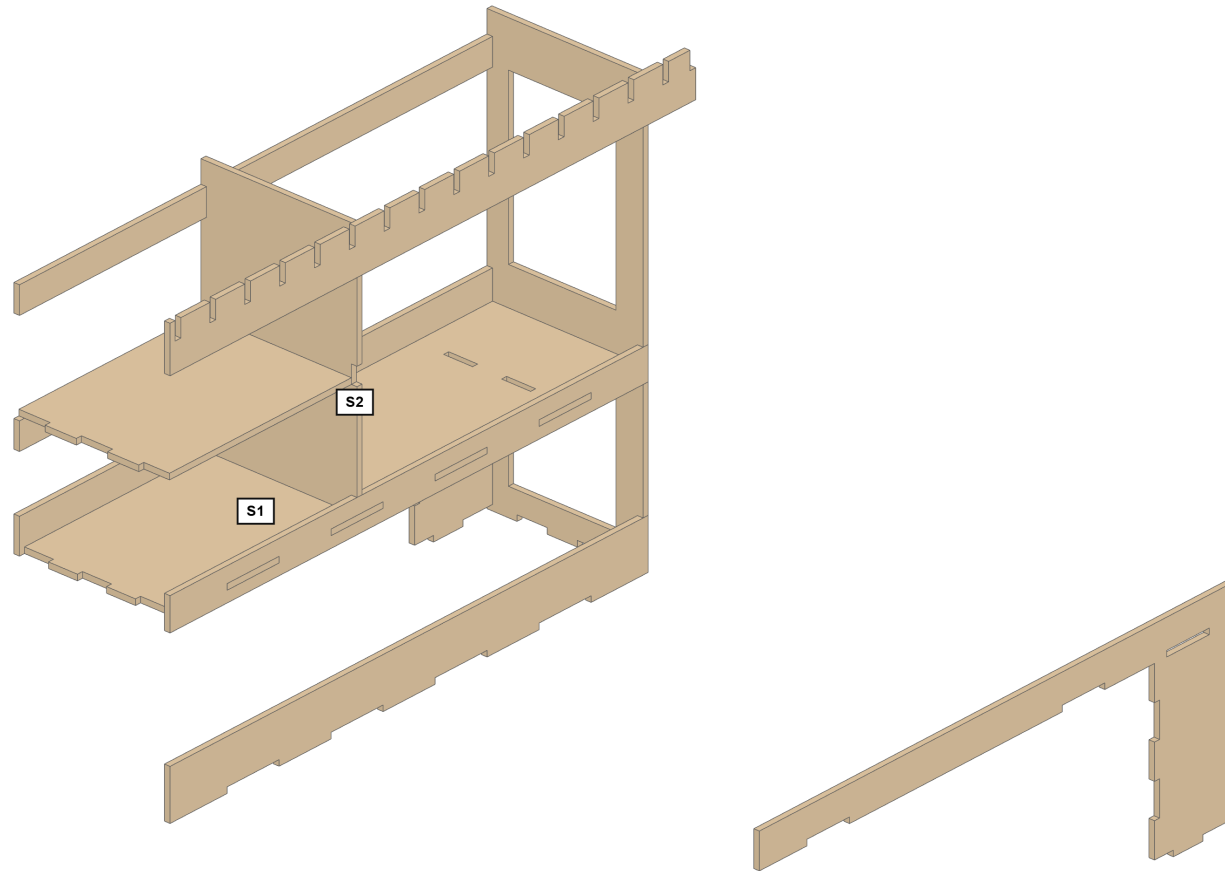


Screw the side panels (S1 to S2) together to form the body – same code = identical parts, the position follows from the pre-drilled holes. Check for square alignment before fully tightening all screws.

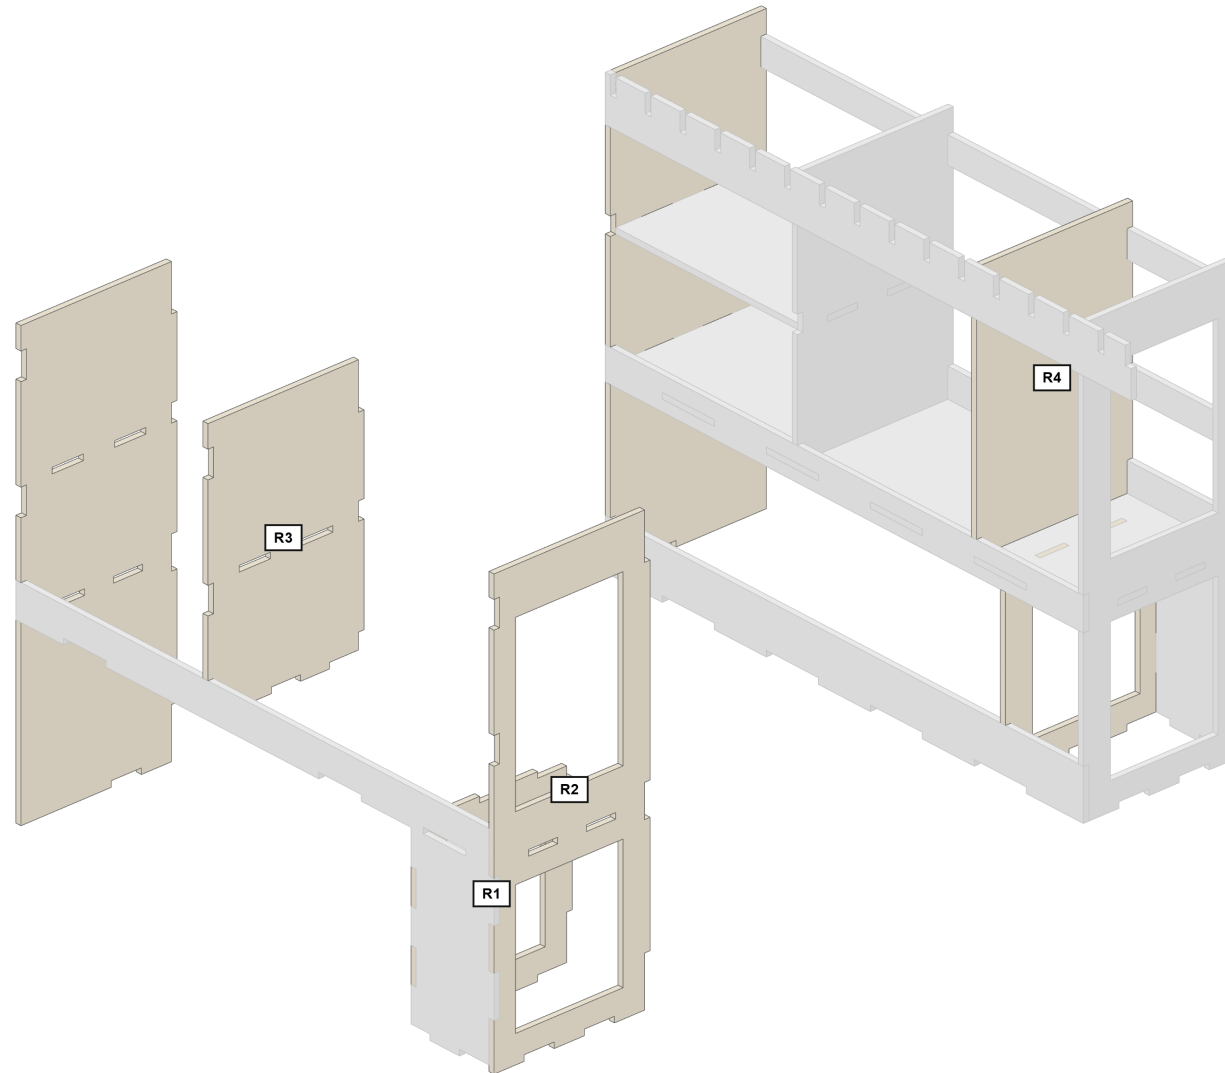


Insert and fasten the support panels (R1 to R4) – they carry the lying surface and divide the storage space. Codes as marked on the parts.

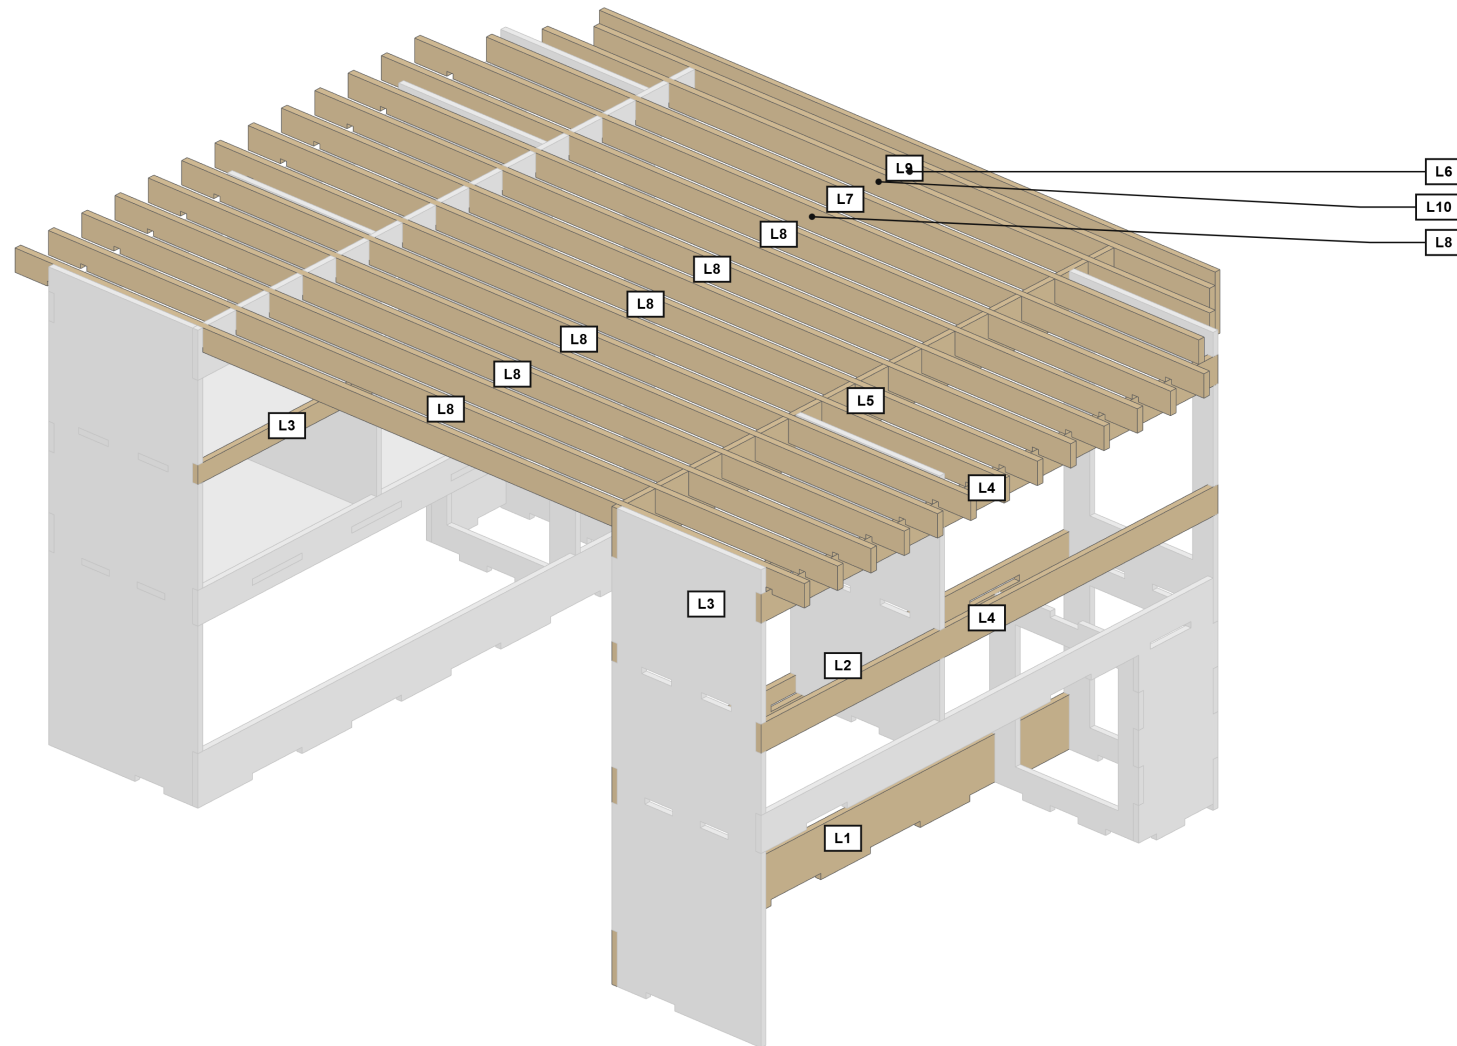

Insert and fasten the slats (L1 to L10) – same code = identical parts. They stiffen the bed box and support the lying surface.

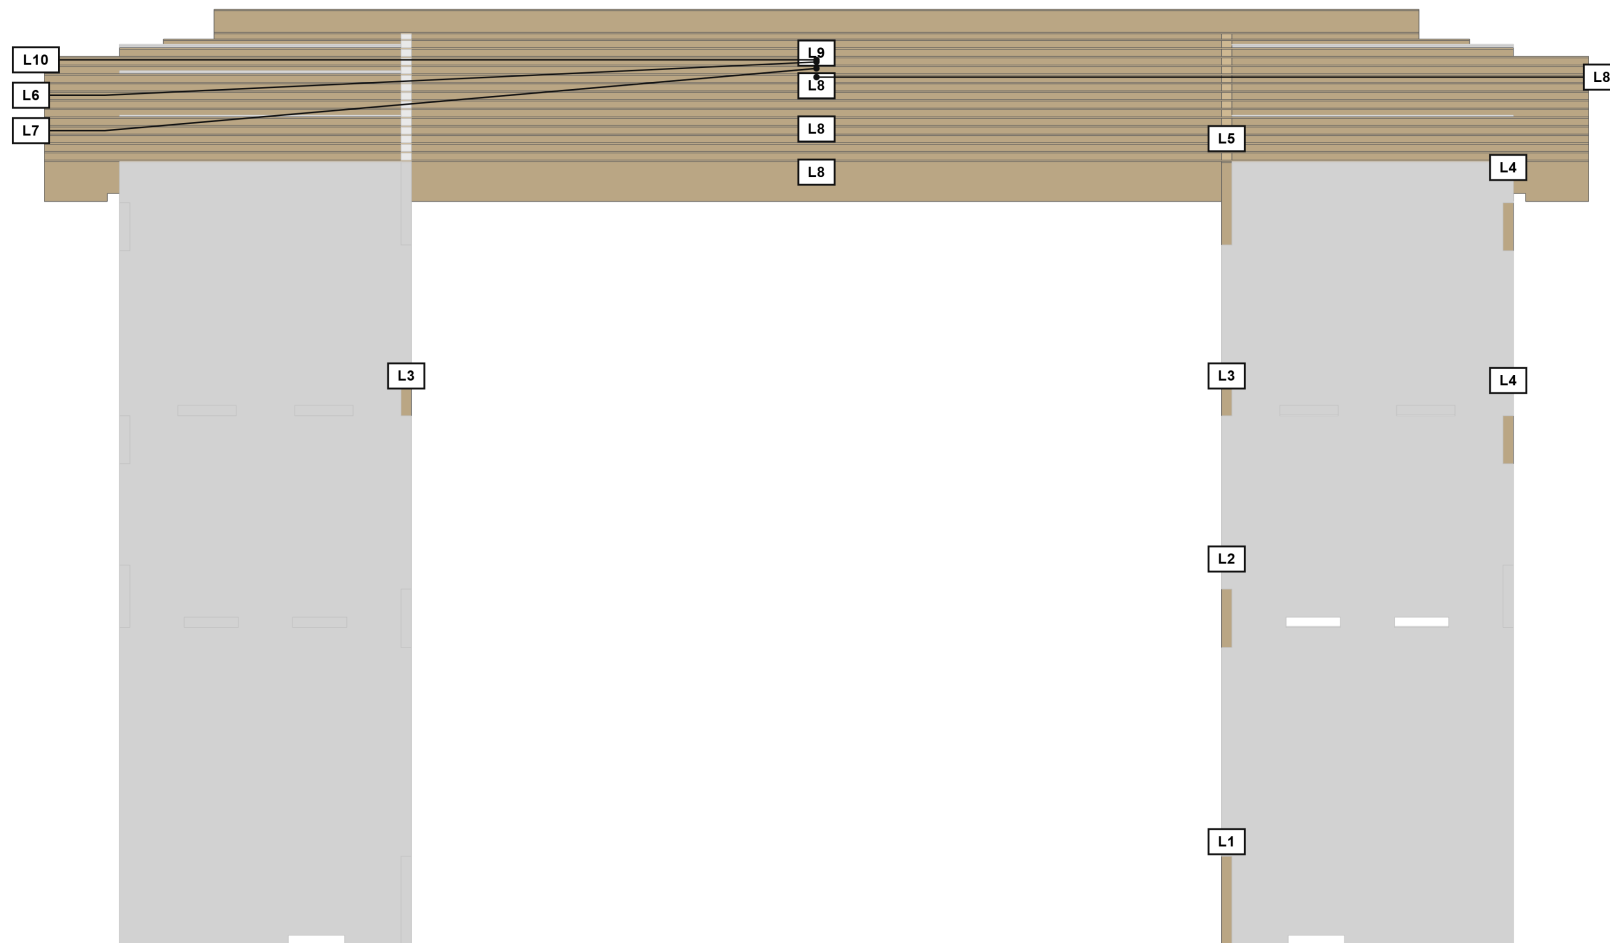


Control view from the front: the position of all slats in the bed box.

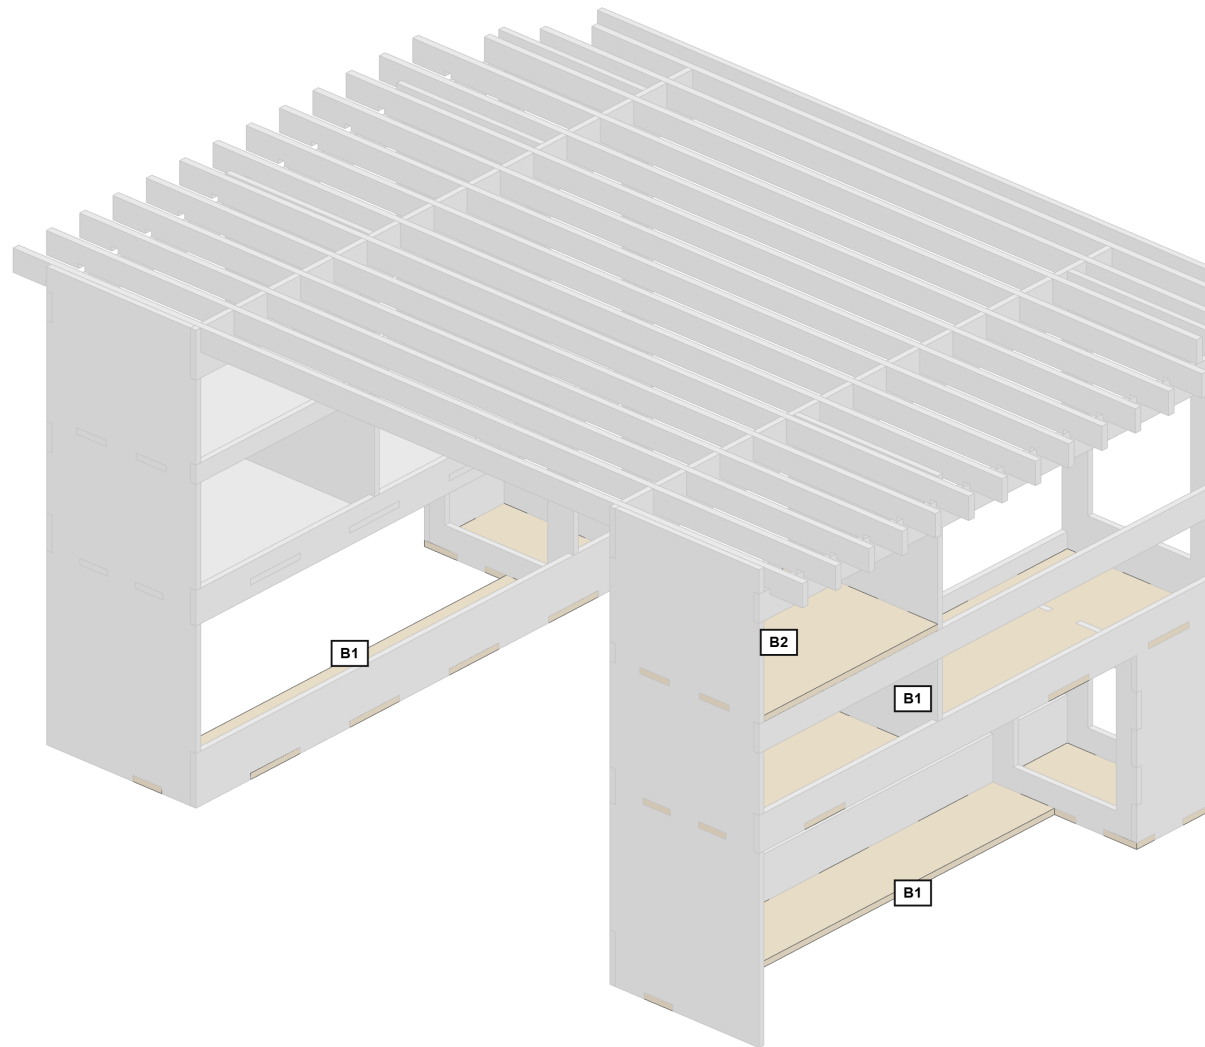

Insert the panels (B1 to B2) and fasten them.

DONE!

JULI VANSYSTEM

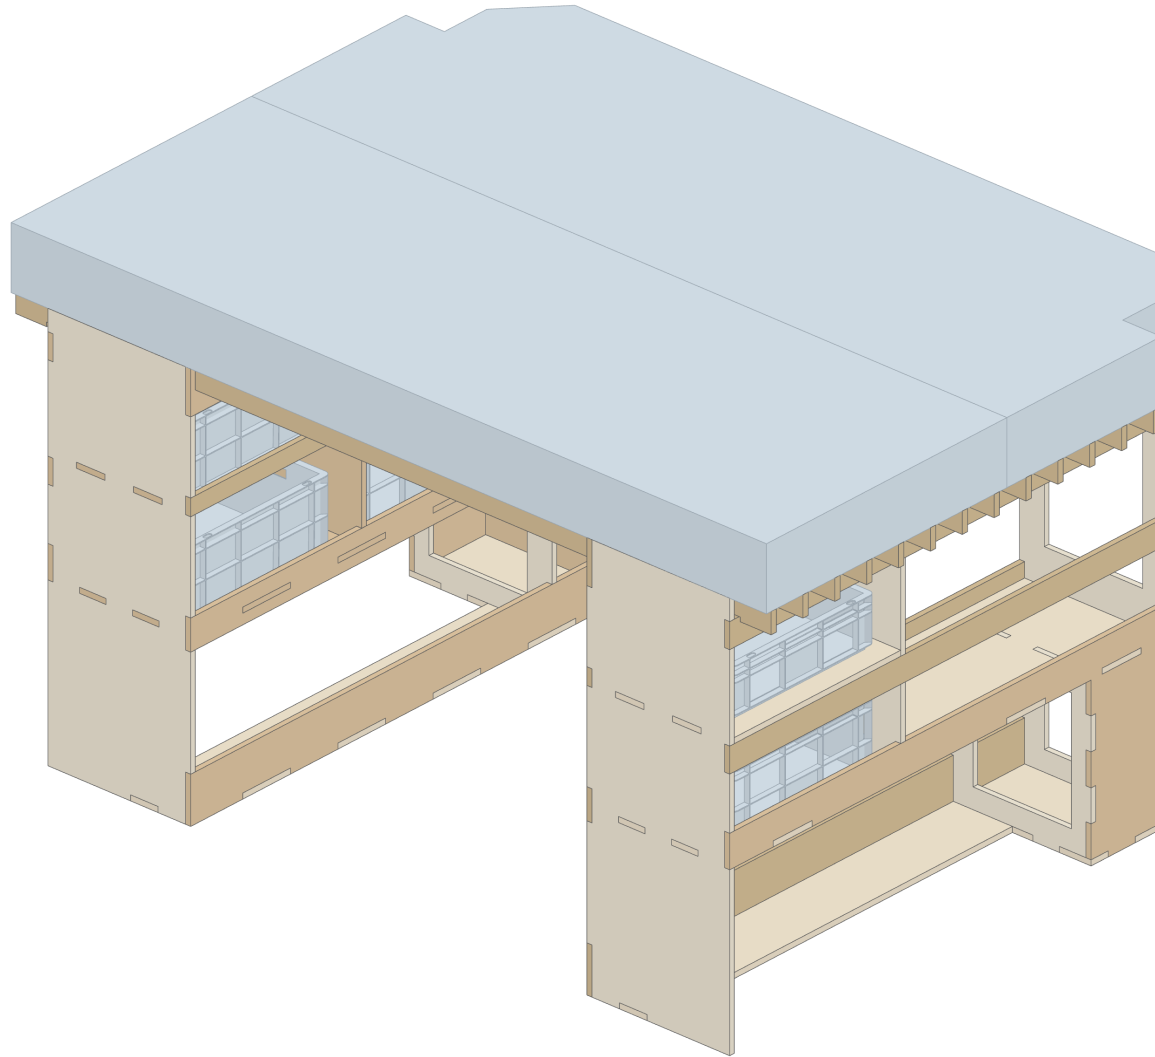

YOUR FURNITURE MODULE IS READY.

Mounting in the vehicle: hook into the base build with the Everlock connectors and lock — all sets & the 3D configurator at juli-vansystem.com