




JULI VANSYSTEM

ASSEMBLY INSTRUCTIONS · FURNITURE MODULE

**BASE CABINET
NARROW –
EUROBOX (RIGHT,
WHEEL ARCH)**

SCHMAL

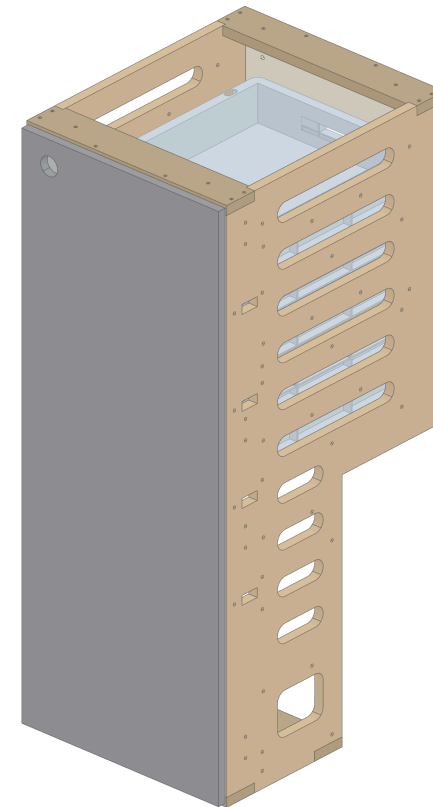

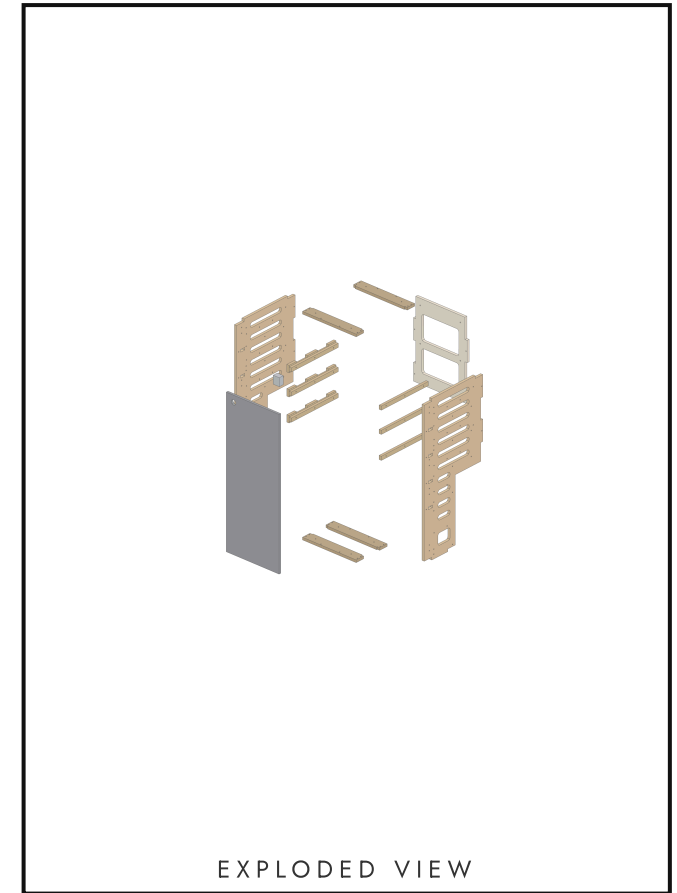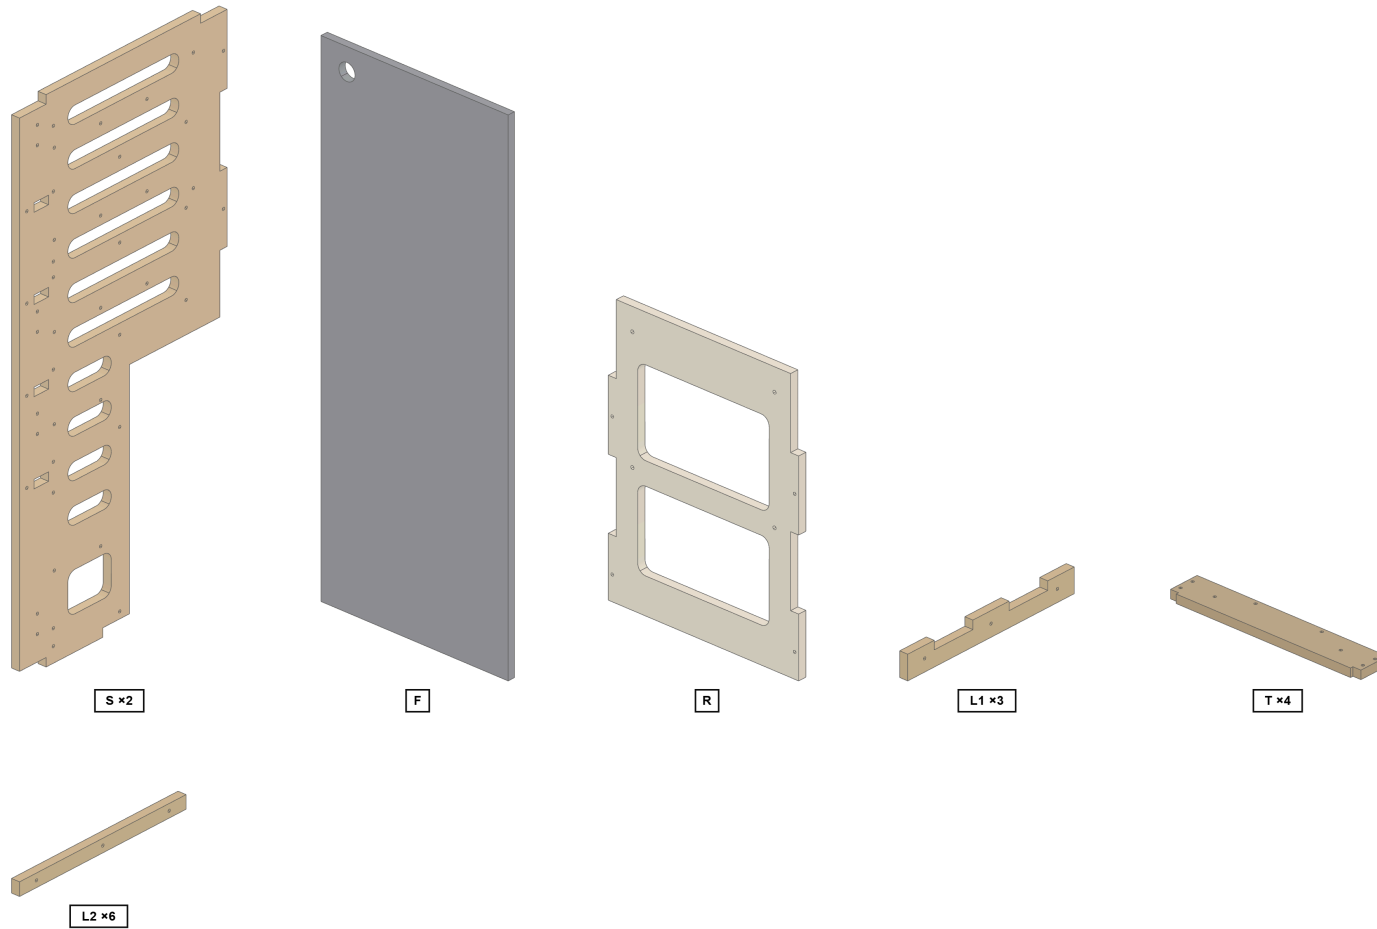

21

PARTS TOTAL

16


BODY PARTS

1


FRONTS / DRAWERS

1


EVERLOCK CONNECTORS

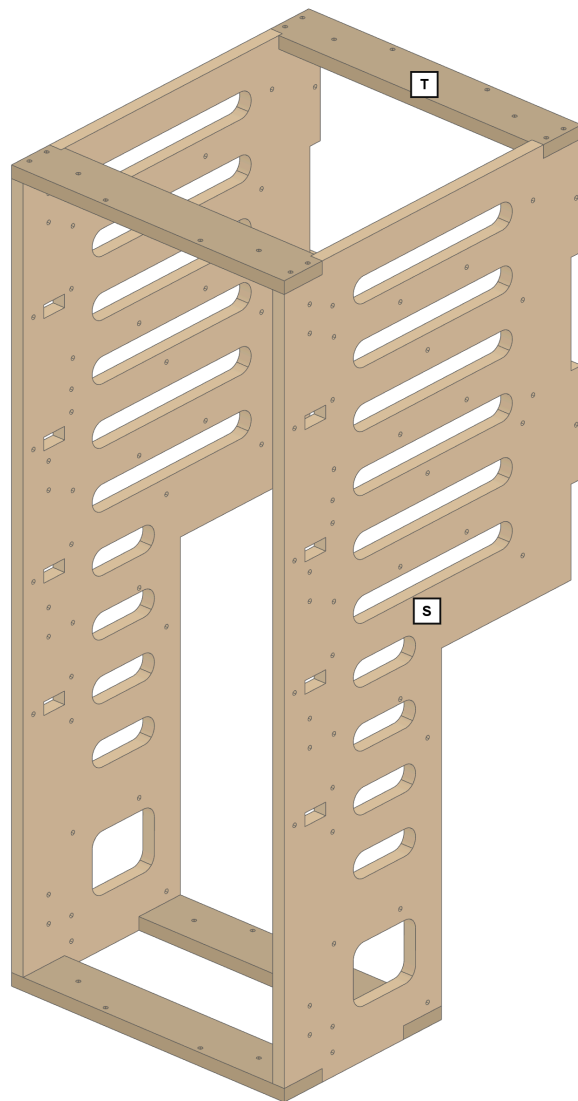


Screw the side panels (S) and rails (T) together to form the body – same code = identical parts, the position follows from the pre-drilled holes. Check for square alignment before fully tightening all screws.

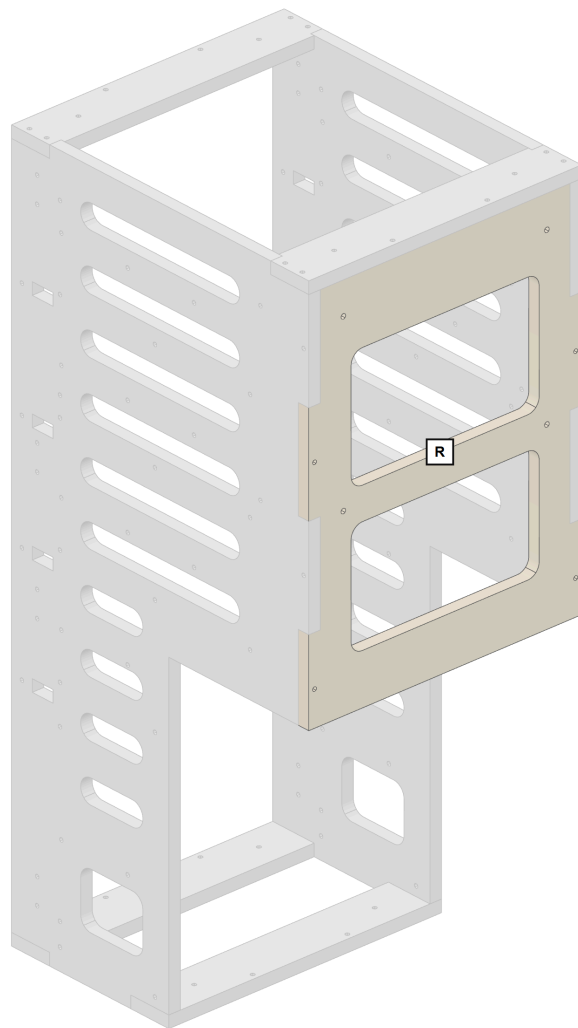


Place the back panel (R) and screw it all around. It squares the body and forms the contact surface to the vehicle wall.

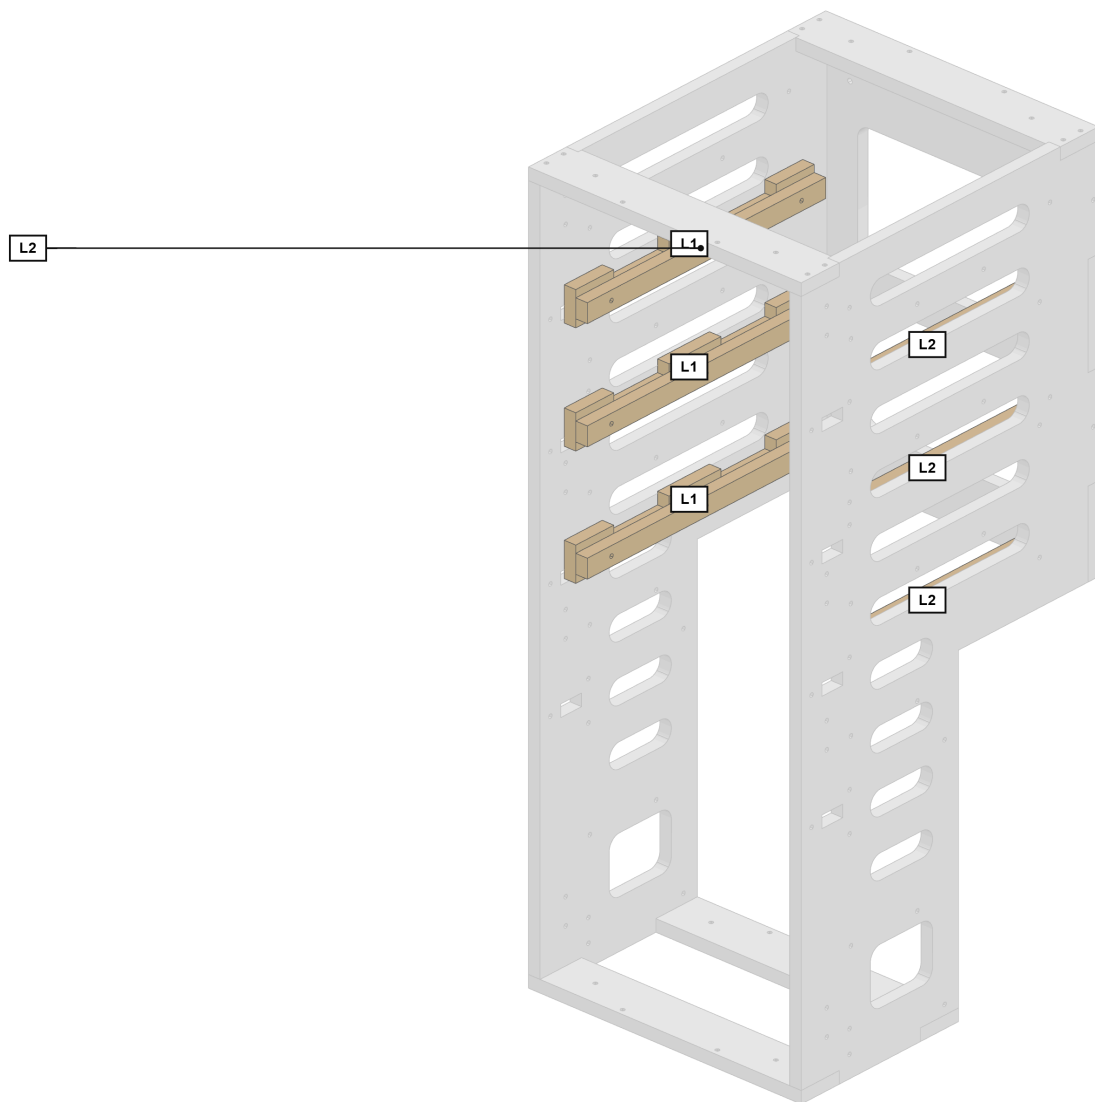


Fasten the strips (L1 to L2) to the inner faces – the positions are pre-drilled. They support Euroboxes or shelves and stabilise the body.

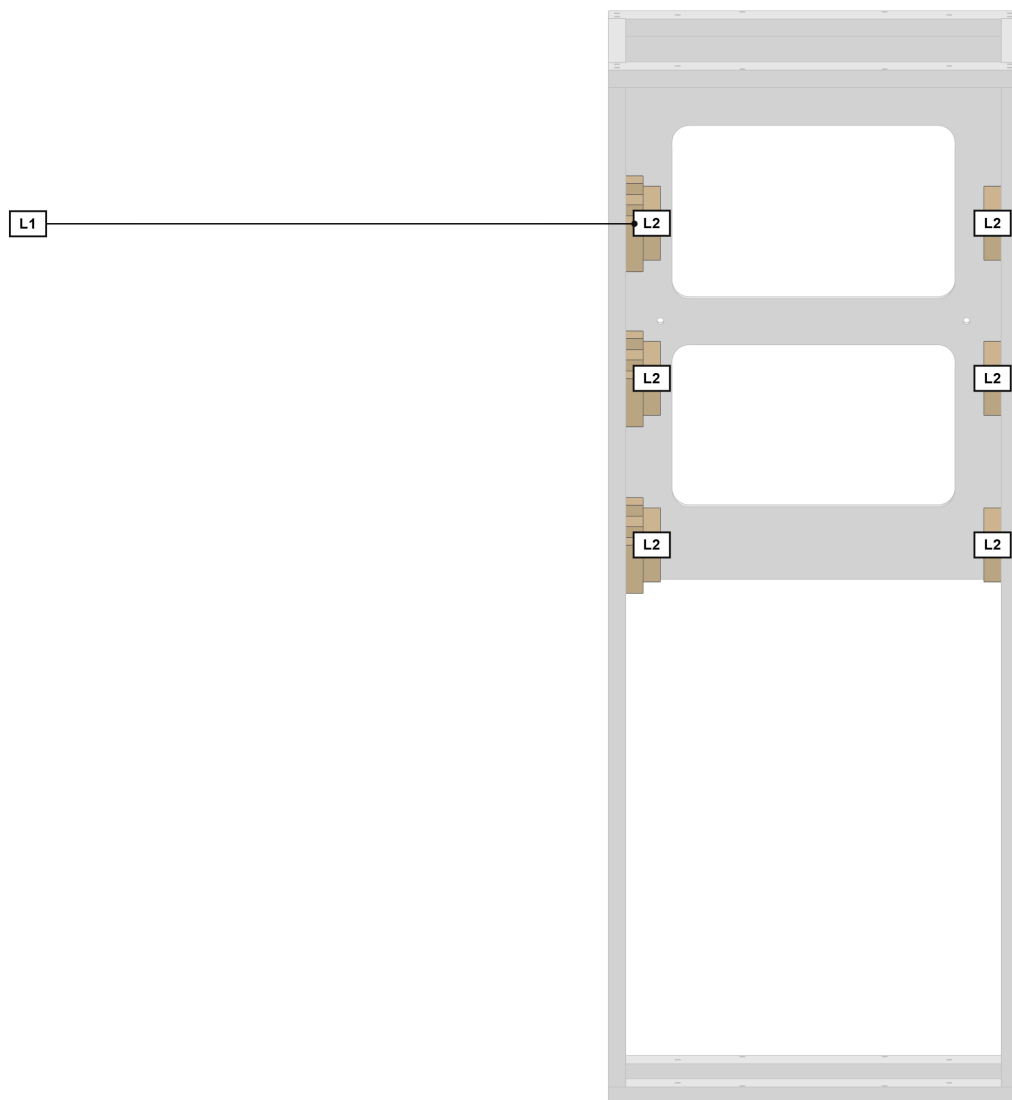


Control view from the front: the position of all strips on both sides. Note for the narrow cabinets – left and right side have different layouts.

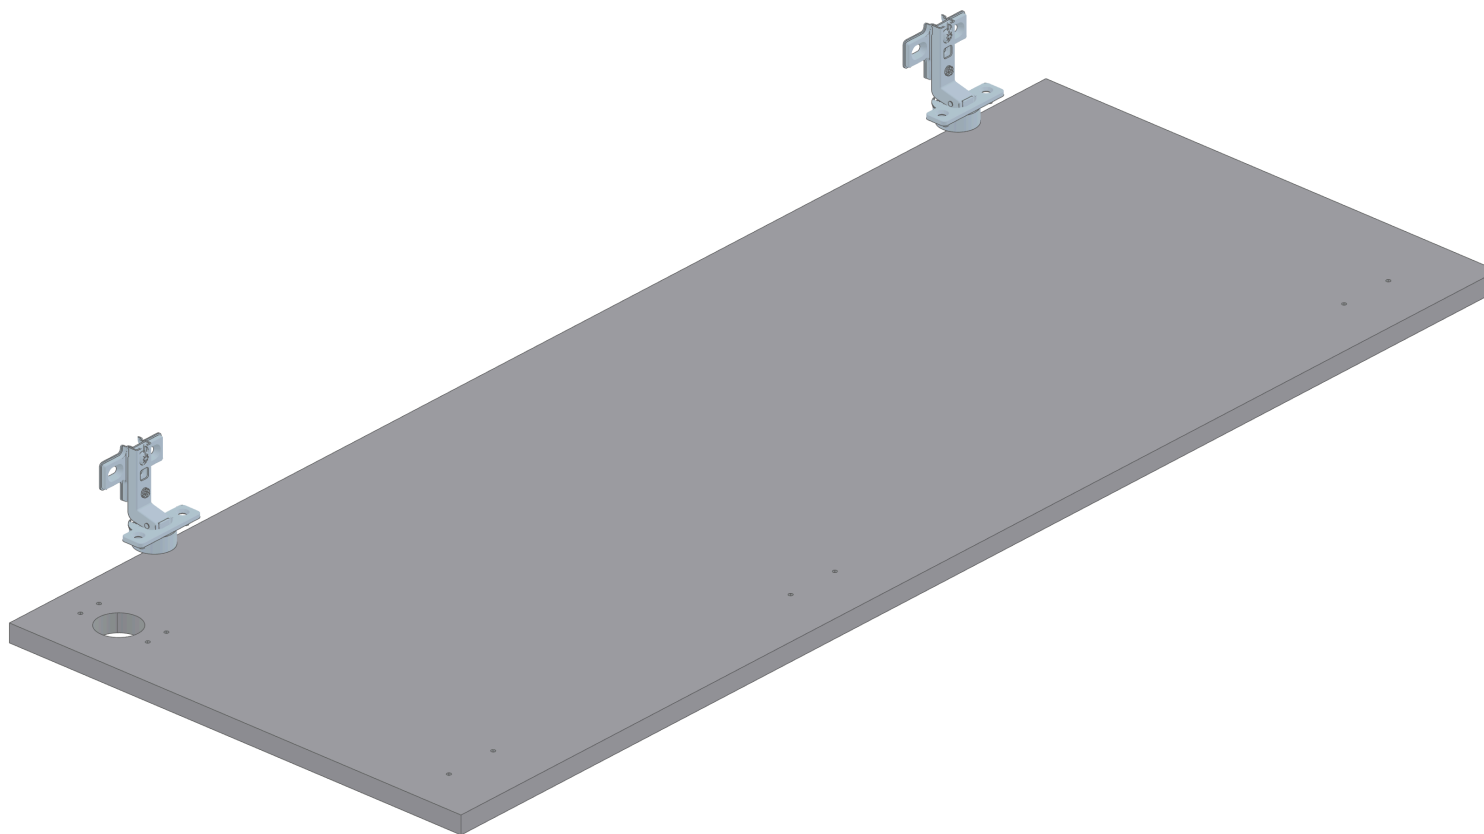


Lay the door flat on the table with its visible side down. Insert the cup hinges (Riex NS30, Ø 26 mm cup) into the pre-drilled cup holes, align the arm square to the door edge and screw the cup tight.

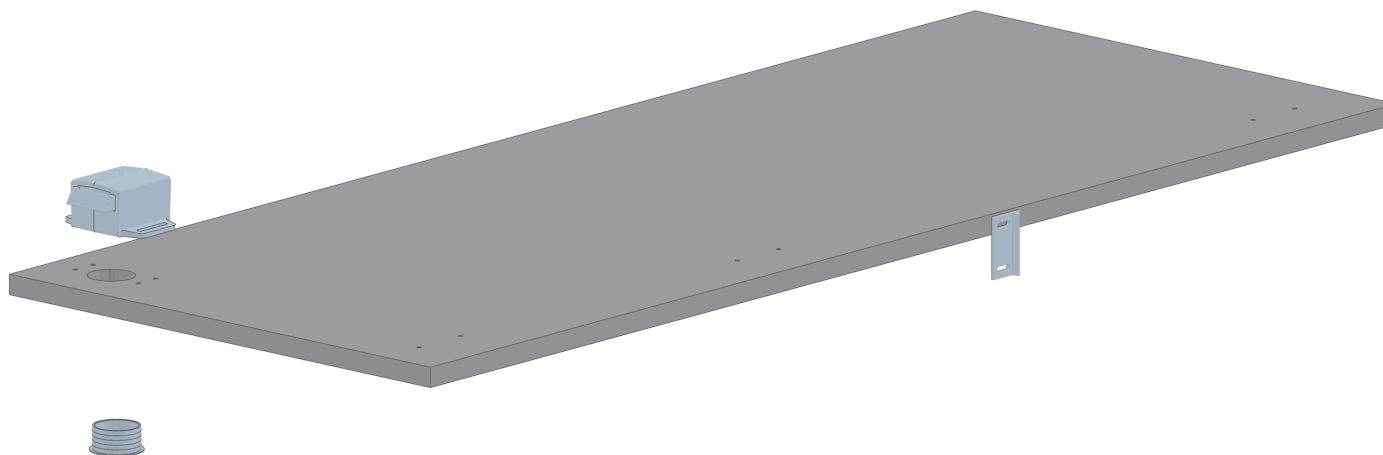


Screw the Everlock lock body onto the inside of the front – rotated so that its slotted holes sit over the pre-drilled holes. Insert the bezel from the visible side (below), in line with the grip hole. The stainless steel striker bracket mounts on the body – see next page. The spring-loaded lock engages automatically when closing; to open, press the lever with a finger through the hole.

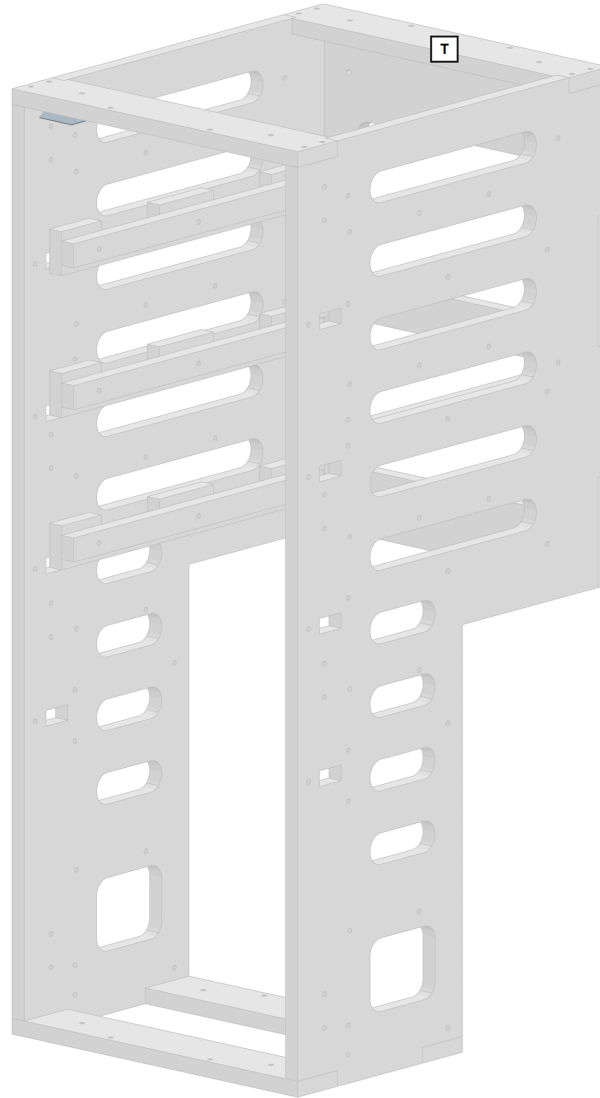

Screw the stainless steel striker brackets from below to the front top rail (T1): on double-door cabinets at both hole pairs in the middle area, on single-door bodies at the outer position left or right – on the handle side, depending on the door hinge side. The slotted holes allow adjustment; the lock engages on the bracket when closing.

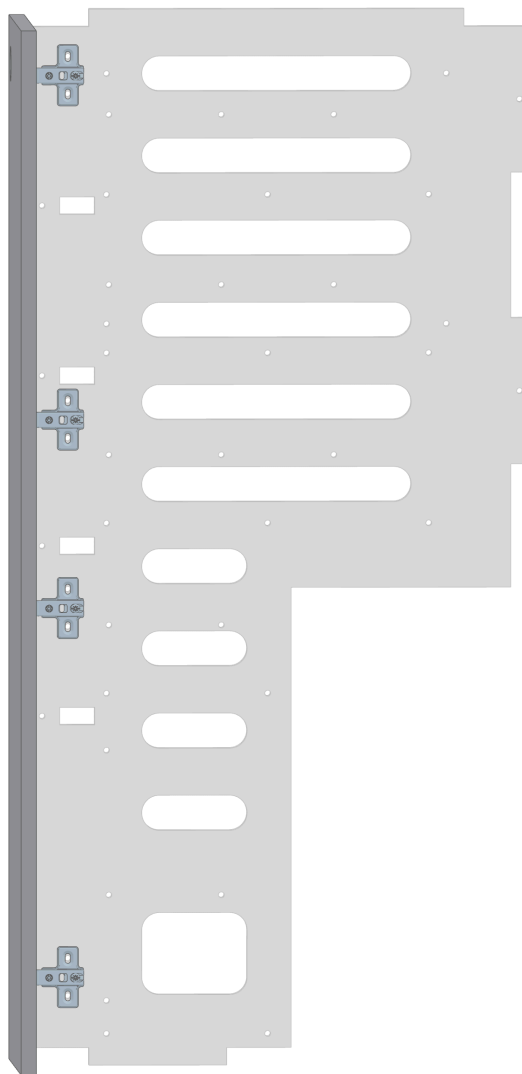

The view shows the hinge wall from the inside: screw the mounting plates to the marked pre-drilled holes, then slide the door with its hinge arms onto the plates (slide-on) and tighten the clamping screw – use the same screw to adjust the gap, the slotted holes allow height adjustment. A second door is mounted mirror-image on the opposite wall.

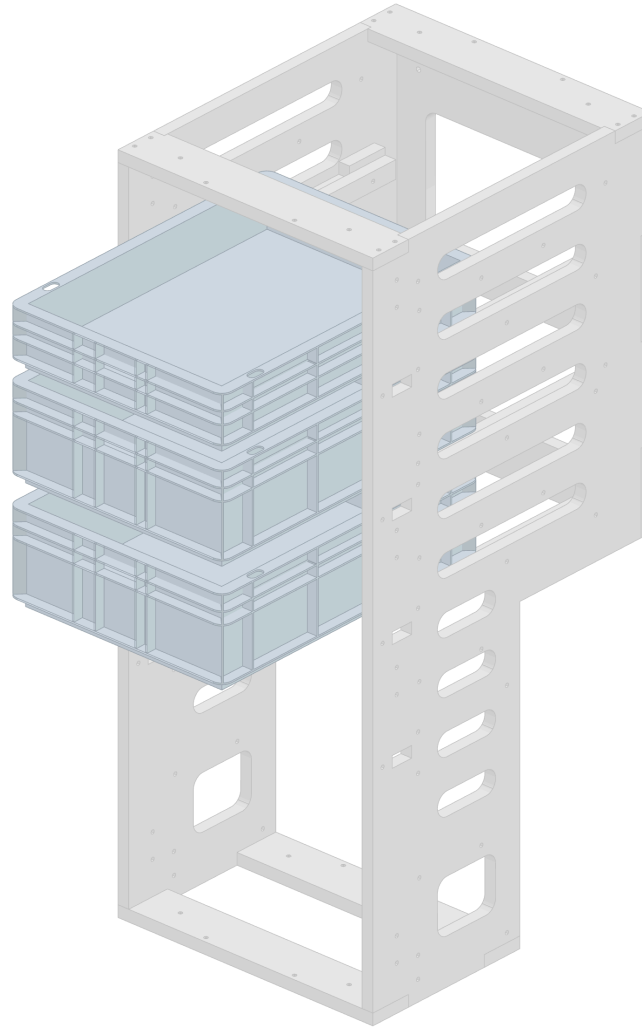


Set the Euroboxes onto the strip pairs and slide them in to the stop – the strips guide the boxes laterally, the box rim runs on the strip.

DONE!

JULI VANSYSTEM

Everlock connectors: 1 pcs

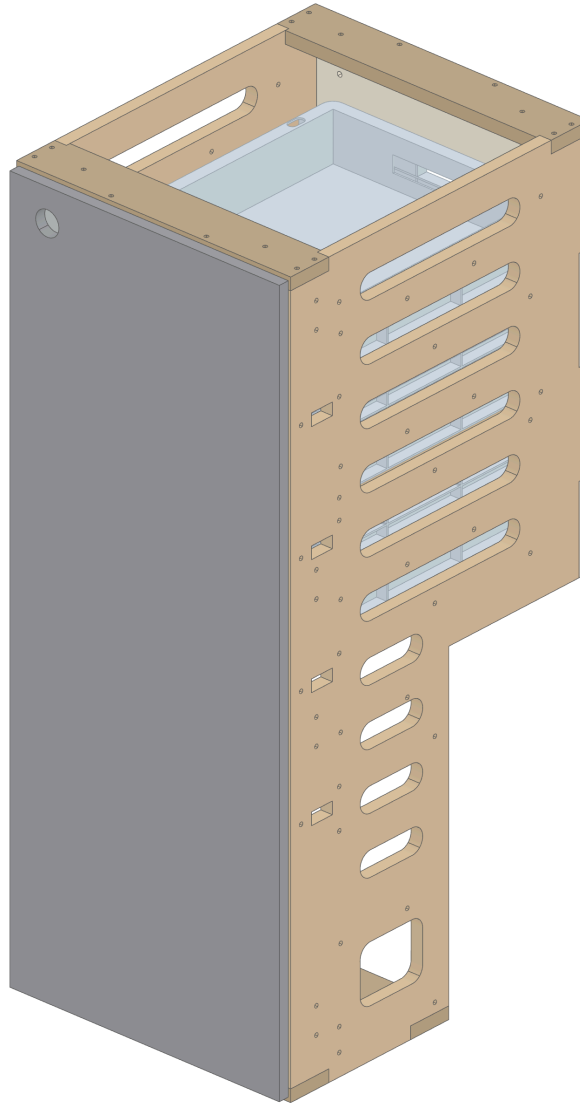

YOUR FURNITURE MODULE IS READY.

Mounting in the vehicle: hook into the base build with the Everlock connectors and lock — all sets & the 3D configurator at juli-vansystem.com